



## Protection de radiateur/ Radiator guards KTM 250/300EXC

14 NE01-01-001	Tbhc 6*16
2 NE01-01-012	Tbhc 6*12
4 PM03-02-009	Black spacer lg 113
2 NE01-03-001	Washer M6
2 NE06-01-007	
2 NE01-04-002	Clamped bolt M6
1 PM03-01-008	Spacer lg40mm


**REF: AX1174**

Plaquette inox ( NE06-01-007 ) à monter sur le radiateur dans cette position pour recevoir la fixation d'ouïe

Stainless steel plate (NE06-01-007) to mount on the radiator in this position to receive the radiator cover's fixation

Ecrous pinces M6

Clamped bolt

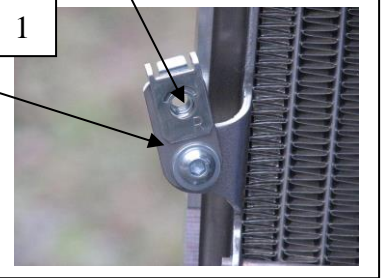

Tbhc 6\*16  
fournies

Tbhc 6\*16  
liveries


Entretoise de liaison entre coté gauche et droit ( tbhc 6\*12)

Spacer to link left and right side with tbhc 6\*12



Coté intérieur

Inside side

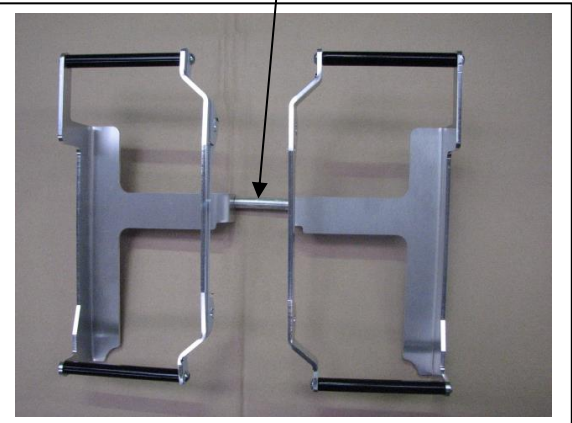

### Montage :

Déposer ouïe de radiateur, déflecteur d'air, vis de radiateur ;

Assembler les 2 entretoises sur le coté intérieur, monter cet ensemble, puis le coté extérieur, monter la plaquettes inox qui recevra la fixation de l'ouïe (suivant photo [1]), liasonner les 2 protections, remettre le déflecteur, l'ouïe.

### Liaison entre côté gauche et droit :

Les 2 protections viennent derrière le radiateur en appui sur le cadre, sont liasonnées ensemble par l'entretoise alu longueur 40mm et 2 vis Tbhc 6\*12

### Mounting :

Put down radiator cover, air deflector, radiator screws.

Assemble two black spacers on the inside side, mount this group. Then mount the stainless steel plate as you can see on the picture [1]. Link the two protections, put back the air deflector and radiator cover.

### Link between left & right side:

The two protections come behind the radiator, against the frame, are linked together by the spacer lg 40mm and two screws Tbhc 6\*12