


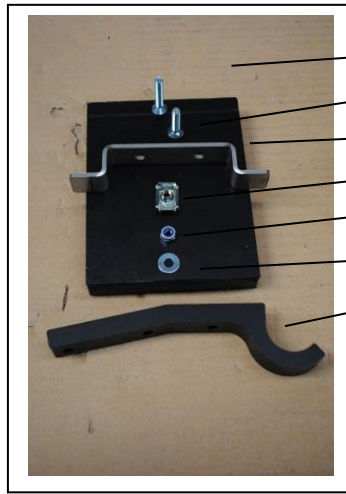


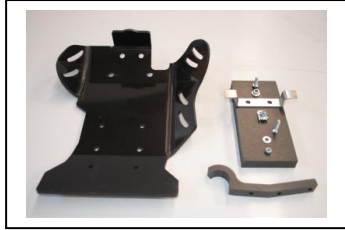

**REFERENCE: AX1258**  
KTM 250-300EXC

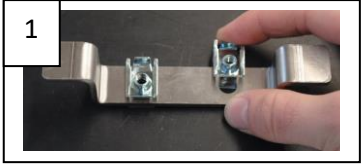

- 6 NE01-02-004
- 2 NE01-02-003
- 1 PM02-01-027
- 2 NE01-04-002
- 6 NE01-03-001
- 6 NE01-04-003
- 2 PM 01-04-071
- 1 NE04-01-011



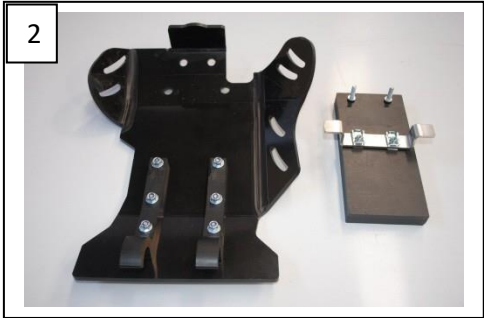


**3**


Place the mounting flange between frame and cases.  
Install the skid plate on the motorbike.



**REFERENCE: AX1258**  
KTM 250-300EXC

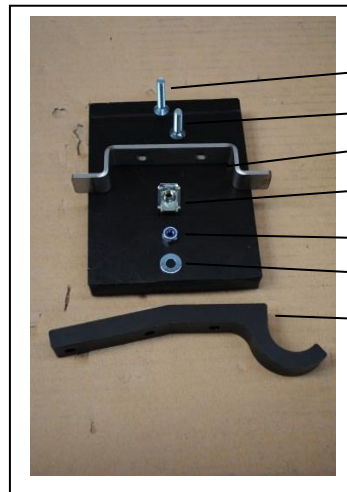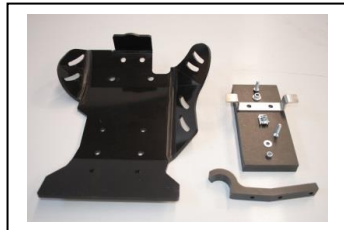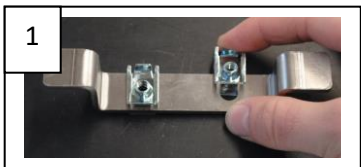

- 6 NE01-02-004
- 2 NE01-02-003
- 1 PM02-01-027
- 2 NE01-04-002
- 6 NE01-03-001
- 6 NE01-04-003
- 2 PM 01-04-071
- 1 NE04-01-011

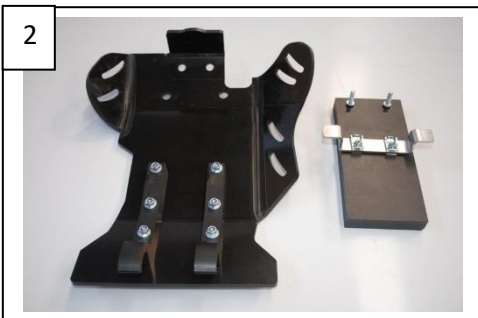

**3**

Place the mounting flange between frame and cases.  
Install the skid plate on the motorbike.

