




- 2 NE01-01-001 Tbhc 6x16mm
- 6 NE01-03-001 M6 Washers
- 8 NE01-04-003 Em6f
- 6 NE01-02-005 Tfhc 6x35mm
- 3 NE01-04-002 Clamped Bolt
- 3 NE01-11-001 Screws 6x25mm
- 1 PM02-01-027
- 1 PM03-04-096
- 2 PM01-04-131




AX1445
Orange Xtrem Skid Plate
KTM EXC250/300



1
Fit the rear plastic brackets with Tfhc 6x35 + em6f + washers

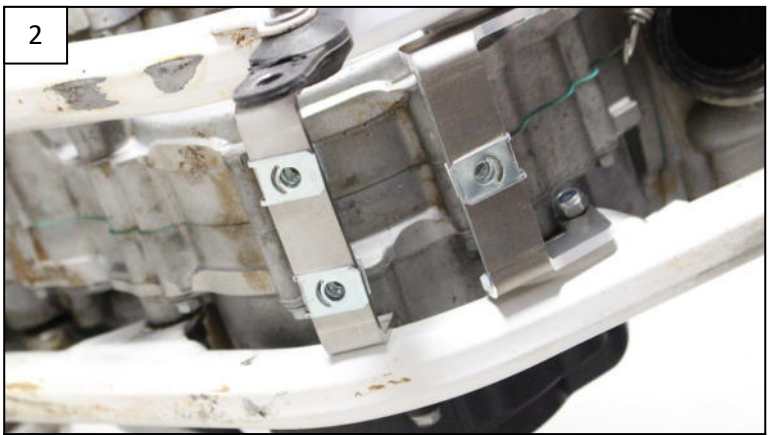

2
Fit the front brackets with Tbhc 6x16mm + em6f
Insert the PM02-01-027 between tubes

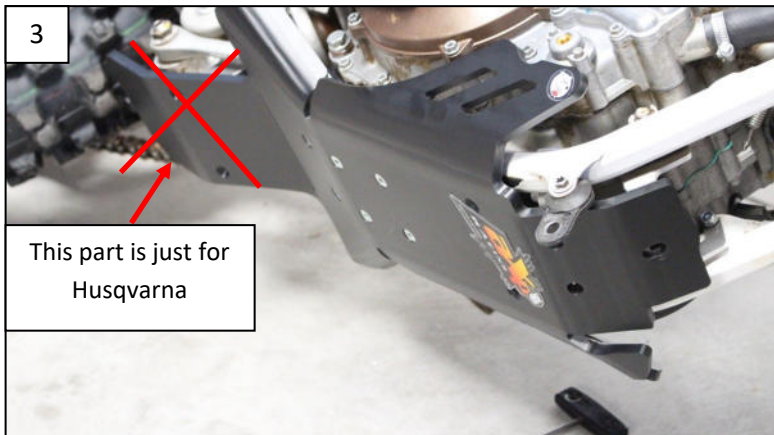

3
This part is just for Husqvarna
Clip the rear of the skid plate to the rear tubes and be ready to fit the front



4
Fix the front with TH6x25 mm + Alloy spacers