

AX1449

Guards KTM/Husqvarna2018




8 NE01-01-009 Tbhc 6*20 6 NE01-01-001 Tbhc 6x16 2NE01-02-001 Tfhc 6x16 8 NE01-03-001 R.M6

4 NE03-02-024 Black Spacer 131mm



FOLLOW AXP RACING ON:

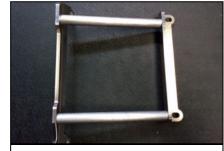

This is the bloc



Put down all components



Fix spacers and alu parts



Put the plastic between the bloc and the air deflector



Fix the plastic with Tbhc 6x20 + R.M6



Fix the bloc with Tbhc 6x16 + R.M6 on the air deflector points

List:

8 NE01-01-009 Tbhc 6*20 6 NE01-01-001 Tbhc 6x16 2NE01-02-001 Tfhc 6x16 8 NE01-03-001 R.M6 4 NE03-02-024 Black Spacer 131mm

FOLLOW AXP RACING ON:






This is the bloc



AX1449

Put down all components

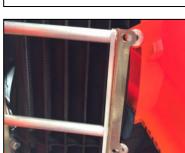

Put the plastic between the bloc and the air deflector



Fix the bloc with Tbhc 6x16 + R.M6 on the air deflector points



Fix spacers and alu parts

Fix the plastic with Tbhc 6x20+ R.M6