



**AX1560**  
**Adventure Orange Skid plate**  
 KTM 790/890 Adventure/R


VIDEO ON



- 4 NE01-11-001
- 2 NE01-02-005 Tfhc 6x35mm
- 1 NE01-02-003 Tfhc 6x25mm
- 8 NE01-02-002 Tfhc 6x20mm
- 15 NE01-04-003 Em6f
- 15 NE01-03-001 M6 Washers
- 4 NE01-01-009 Tbhc 6x20mm
- 4 NE01-03-006 M6 large washer
- 1 PM03-04-103 Alu rear fixation
- 1 PM03-04-104 Alu rear fixation
- 1 PM03-04-105 Alu bracket Right
- 1 PM03-04-106 Alu bracket Left
- 2 NE09-01-001 Silent bloc
- 2 NE03-01-019 Spacer D10.5
- 1 PM01-08-001 Mud guard
- 1 PM01-04-191 Hdpe part 20mm
- 1 NE04-01-177 STICKER (3 units)




**WARNING !** The stock 890 fuel pump guard will interfere with our skid plate, we recommend to use the ROTTWEILER PERFORMANCE item which is smaller and makes the fitment easier. Our skid plate uses the unused center stand pivots for mounting, which makes it not compatible with any after market center stands !

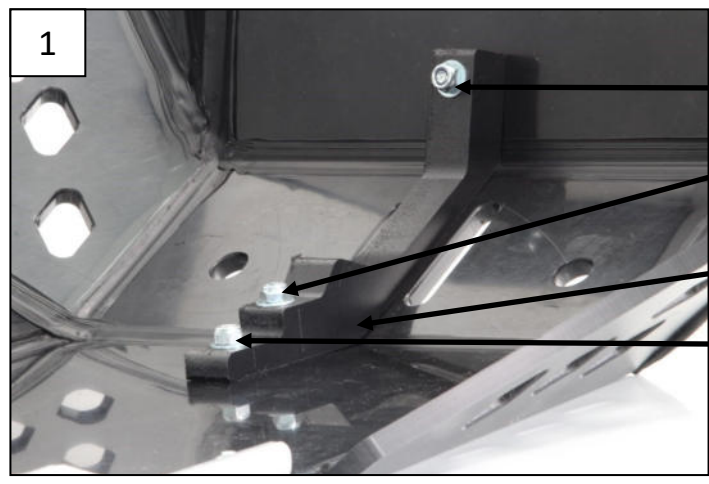


1

- TFHC 6x35mm
- EM6F
- M6 RING
- PM01-04-191**
- TFHC 6x25mm
- EM6F
- M6 RING

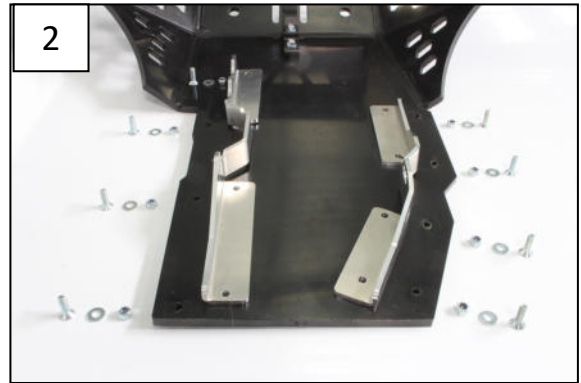

2


- TFHC 6x20mm
- EM6F
- M6 RING

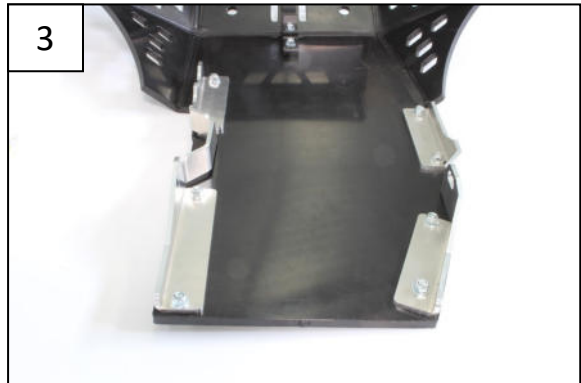

3



CHECKING MEASURE: 230.5mm in between

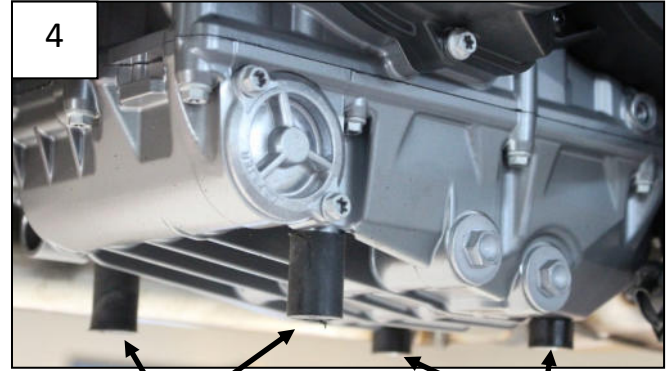

4

NE09-01-001

ORIGINS



REINFORCED BRACKETS  
PM03-04-105 / PM03-04-106



USE THE FRONT FIXATION SCREW  
TO CENTER THE ALU PART THEN  
SCREW THE 2 POINTS ON THE WING



Alloy Spacer  
NE03-01-019

OEM Screw



NE01-11-001

MUD GUARD OPTION

VIDEO ON

