



AX1567

Skid plate

Surron - LightBee

Assembling instructions

What's in the box ?

- 4 NE01-04-003 - EM6F bolts
- 4 NE01-03-001 - EM6 washers
- 6 NE01-02-003 - TFHC 6x25 screws
- 6 NE01-02-001 - TFHC 6x16 screws
- 2 NE01-02-004 - TFHC 6x30 screws
- 2 NE01-01-004 - TBHC 8x25 screws
- 2 NE01-04-001 - EM8F bolts
- 4 NE01-04-002 - Clamped bolts
- 1 PM01-04-263 - Front left fixation
- 1 PM01-04-264 - Front right fixation
- 1 PM01-04-265 - Rear left hook
- 1 PM01-04-266 - Rear right hook
- 1 PM01-07-062 - Left cover
- 1 PM01-07-063 - Right cover
- 1 NE04-01-243 - Sticker



The paper instructions may be limitless, a tutorial video is available online to help you.

Scannez le QR code pour regarder la vidéo de montage.



Approximate time of assembly: 15 minutes.

A skid plate is made to protect the vital components of your bike and does not have a « life warranty ». However, production default may happen and we cover it during the first year of use.


In case of premature breakage, please write to contact@axpracing.com

Follow the steps !



1

Place the clamped bolts inside the front fixations.

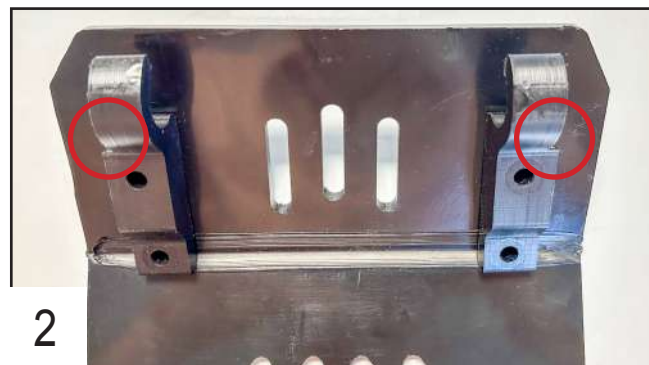


2

Place the rear hooks with the machined faces on the outside.




3

Place the smaller screw (6x25mm) in the bottom hole, the 6x30 screw on top and tighten.

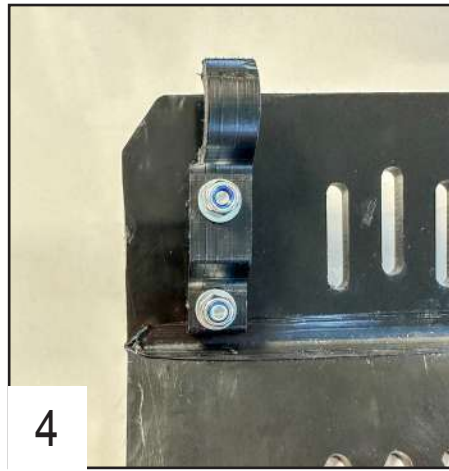


4

Repeat the operation on the other side.

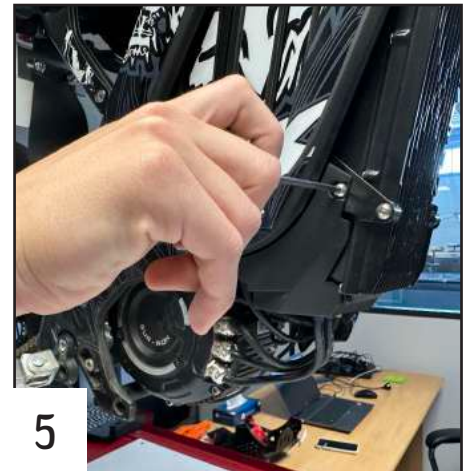


5

Remove the plastic protection.

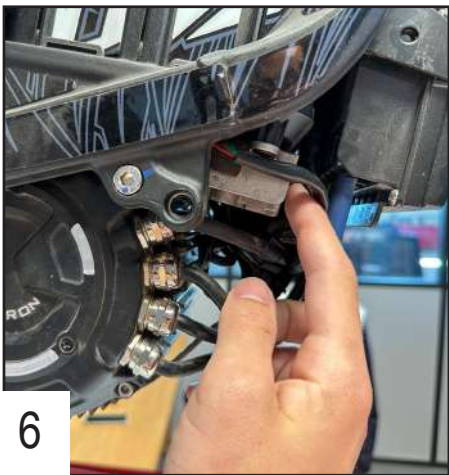


6

Lift the cable up.

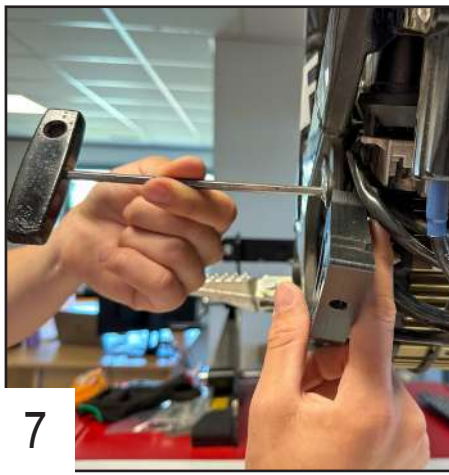


7

Place the front right fixation using 8x25 screw + EM8F bolt and tighten.

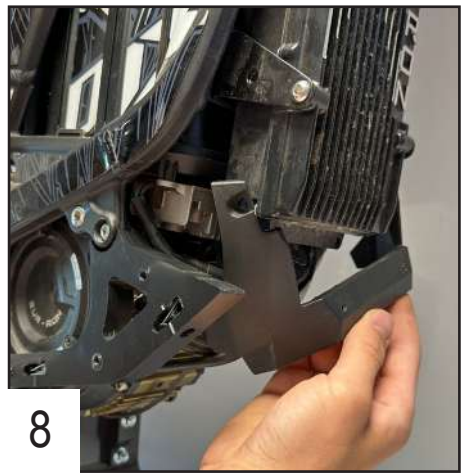


8

Place the plastic protection back and fix the second front fixation on the left side.

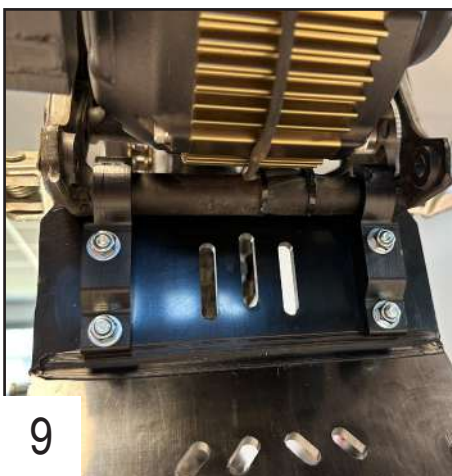


9

Insert the plate on the frame using the 2 hooks.

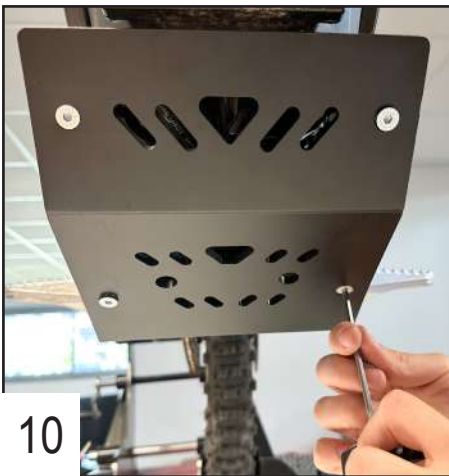

10

Lift the plate up and tighten the four 6x25 screws.

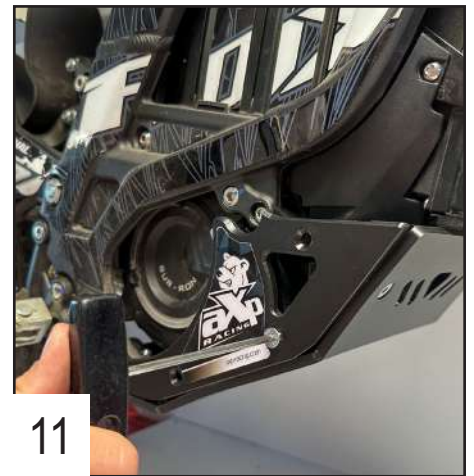

11

Place the stickers and fix the cover using the three 6x16 screws. Repeat the operation on the other side.

You're all ready to ride !