





- 2 PM03-02-028 Black spacers 104mm
- 2 PM03-02-010 Black spacers 128mm
- 1 PM01-07-044 Plastic plate Right
- 1 PM01-07-045 Plastic plate Left
- 6 NE01-01-001 Tbhç 6x16mm
- 2 NE01-02-001 Tfhc 6x16mm
- 6 NE01-01-009 Tbhç 6x20mm
- 2 NE01-01-021 Tbhç 6x8mm
- 4 NE01-03-006 M6 Large Washers
- 4 NE01-03-001 M6 Washers
- 4 NE01-04-002 Clamped bolt M6




**AX1572**  
 TM EN250-300 2S Fi  
 Xtrem Radiator Guards

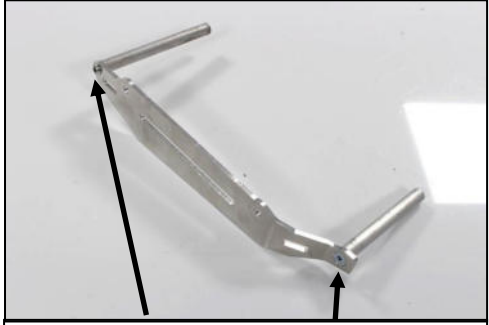


Tbhç 6x16mm - Tfhc 6x16mm

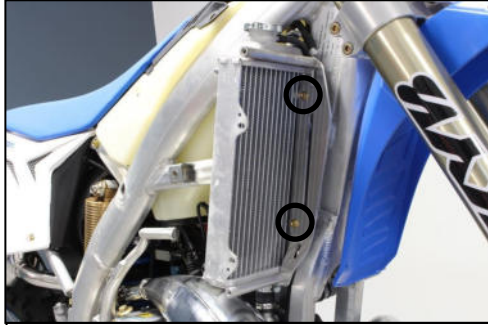


OEM Screws - *Vis d'origine*

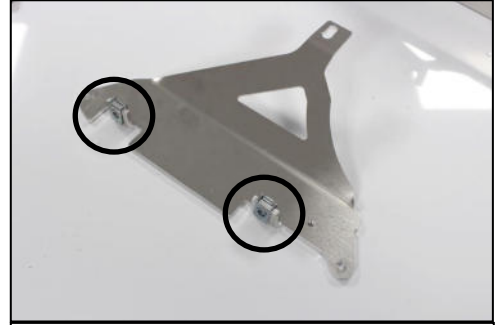


Clamped bolts

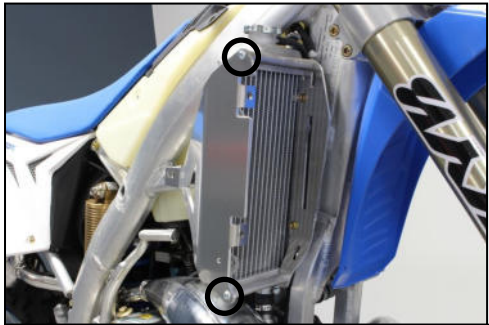

Tbhç 6x16mm

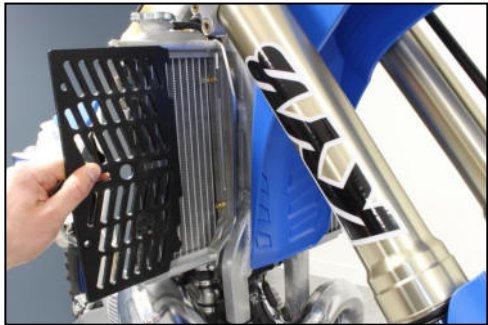

Tbhç 6x20mm + M6 Washers

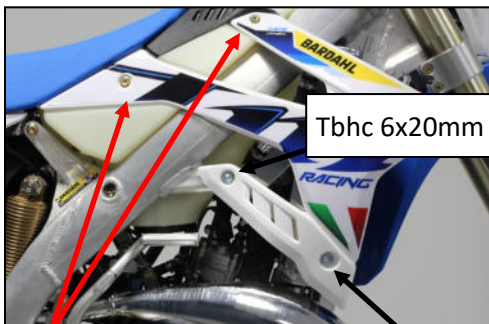

OEM Screws

Tbhç 6x8mm



Follow the same steps for the left side - *Suivre les même étapes pour le côté gauche*

CHECK THE TUTORIAL VIDEO  
 TO GET MORE HELP AT THE  
 MOUNTING  
**AIDEZ VOUS DE LA VIDEO DU  
 MONTAGE**

