





- 2 PM03-02-012 Black spacers 117mm
- 2 PM03-02-028 Black spacers 104mm
- 1 PM01-07-050 Plastic plate Right
- 1 PM01-07-051 Plastic plate Left
- 8 NE01-01-001 Tbhç 6x16mm
- 8 NE01-01-009 Tbhç 6x20mm
- 4 NE01-03-006 M6 Large Washers
- 4 NE01-03-001 M6 Washers
- 6 NE01-04-002 Clamped bolt M6




**AX1573**  
 TM EN300 4S Fi  
 Xtrem Radiator Guards

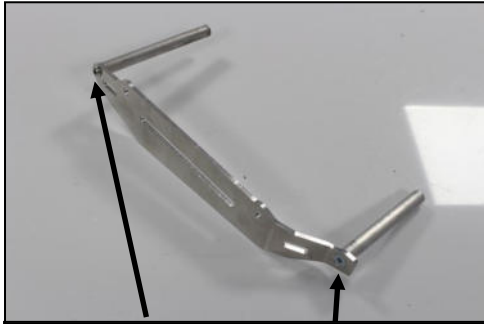


Tbhç 6x16mm

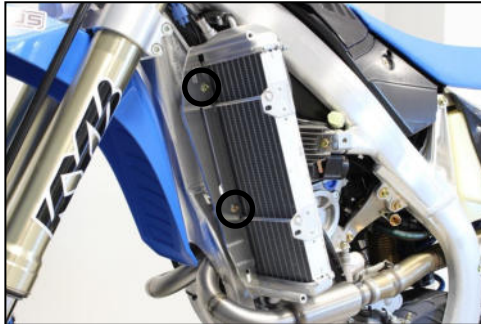

OEM Screws - *Vis d'origine*

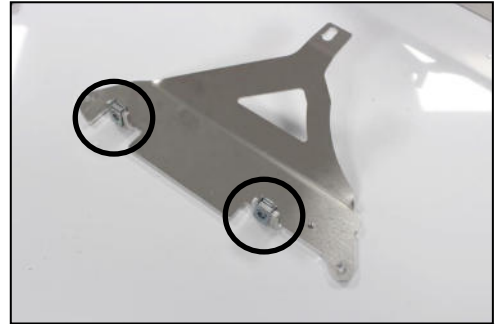



Clamped bolts

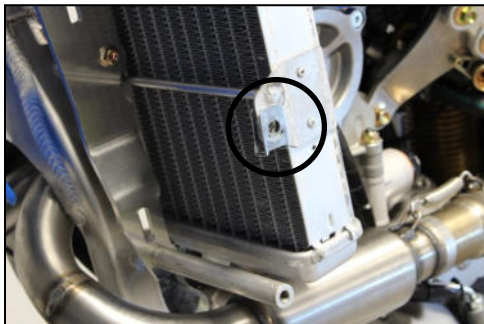

Clamped bolts




Tbhç 6x16mm

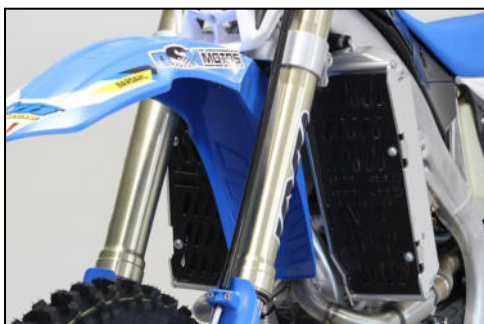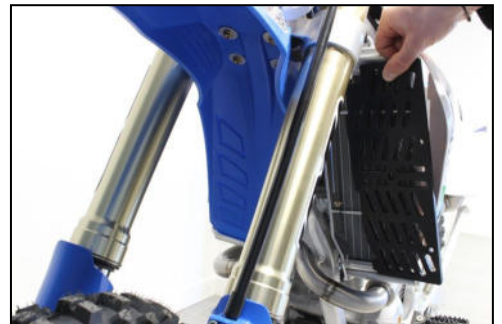

Tbhç 6x20mm + M6 Washers



Align the holes - *Aligner les trous*

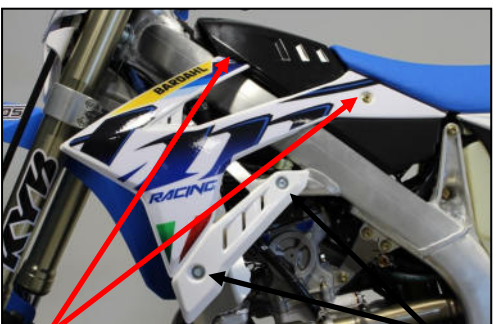

OEM Screws

Tbhç 6x20mm

CHECK THE TUTORIAL VIDEO  
 TO GET MORE HELP AT THE  
 MOUNTING  
*AIDEZ VOUS DE LA VIDEO DU  
 MONTAGE*

