



- 10 NE01-01-001 Tbhc 6x16mm
- 8 NE01-01-009 Tbhc 6X20mm
- 8 NE01-03-001 M6 Washers
- 8 NE01-04-002 Clamped bolt
- 4 PM03-02-010 Black spacers 128mm
- 1 PM03-01-020 Alloy spacers 62mm
- 1 PM01-07-044 HDPE Grid
- 1 PM01-07-045 HDPE Grid


SCAN TO WATCH THE VIDEO AND GET BETTER VISIBILITY




**AX1593**

Radiator guards  
KTM 250-300EXC / EXC TPI


OR CHECK « AXP RACING - KTM 250 EXC / EXC TPI - 300EXC EXC TPI RADIATOR GUARDS » on YOUTUBE

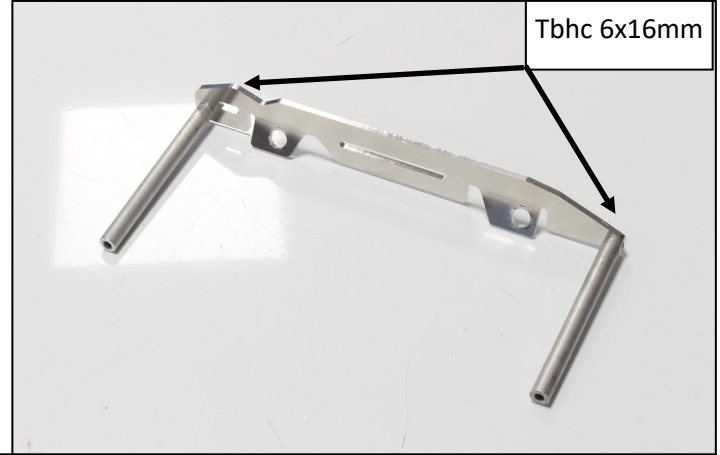


Start by removing the tank and the plastics (1) . Fix the 128mm spacers on both alloy small parts (2)

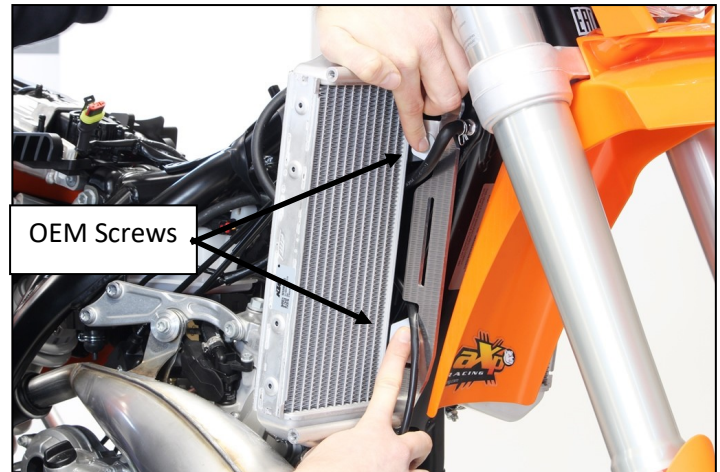


You can remove the cables (3) to make a good fitting (4). Use the windows done to make the cables passing

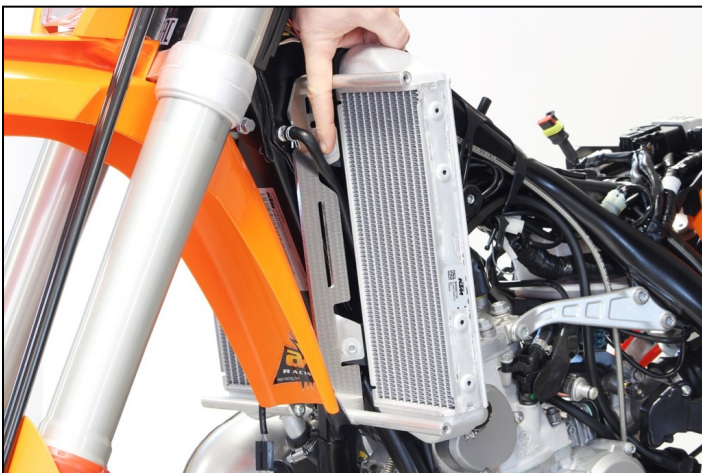


Repeat steps (2) (3) (4) for the left radiator

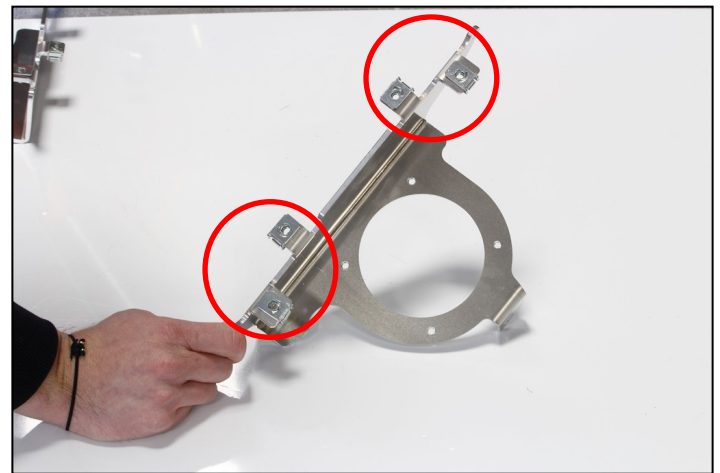

Fix the 4 clamped bolt as shown (use the link to the video for a better visibility)

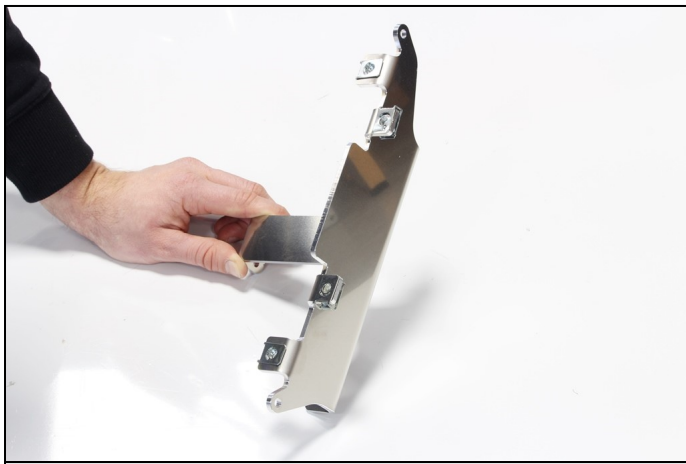




Repeat steps (6) for the left radiator

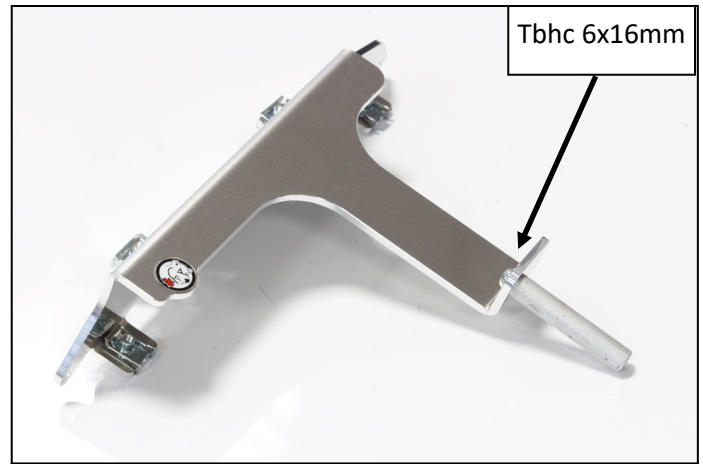

Fix the 62mm spacer



Place the biggest parts of the kit on left and right sides considering the Fan will go on the right (10) (sitted on the bike). Position the screws without tightening anything

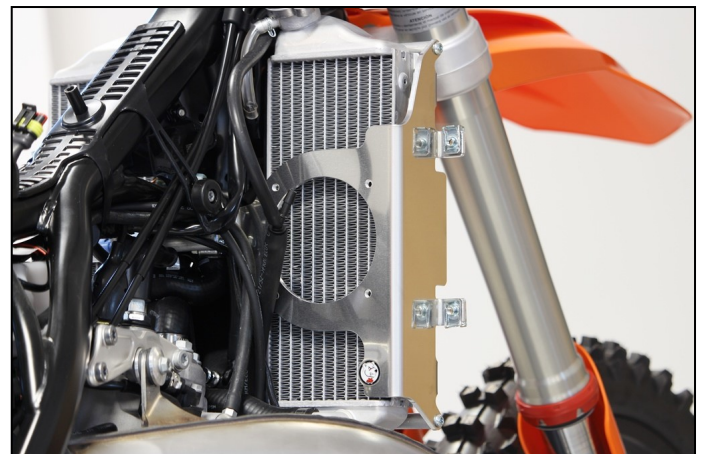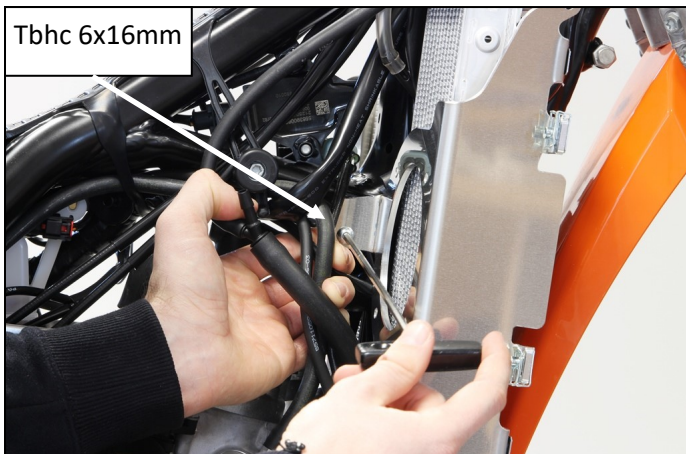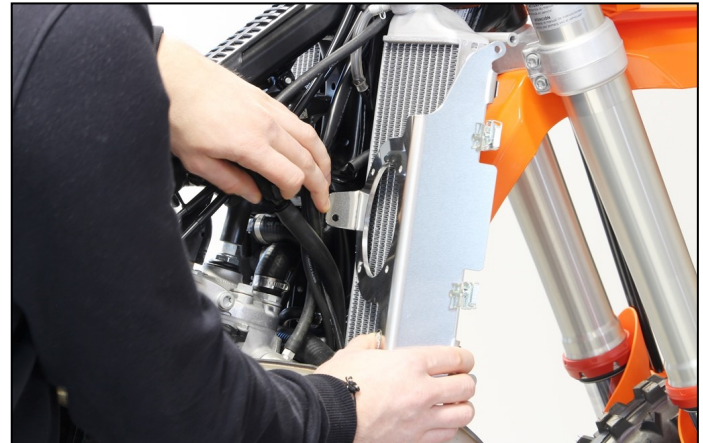

Start the middle first (11) and then all the rest for left and right sides (12)



For right and left sides, place the grids, fix it with Tbhc 6x20mm and M6 Washers (13) (14). Finally, put the tank in place and fit everything (15)