




- 4 NE01-02-003 - Tfhc 6x25mm
- 11 NE01-03-001 - M6 Washers
- 11 NE01-04-003 - Em6f
- 2 NE01-01-005 - Tbhc 8x35mm
- 5 NE01-03-002 - M8 Washers
- 3 NE01-02-006 - Tfhc 6x40mm
- 3 NE01-01-014 - Tbhc 8x50mm
- 4 NE01-02-005 - Tfhc 6x35mm



- 1 PM01-04-213
- 1 PM01-04-214
- 1 PM01-04-215
- 1 PM01-04-216
- 1 PM01-04-217
- 1 PM01-14-001
- 1 NE04-01-196 (Blue/White/Red sticker)

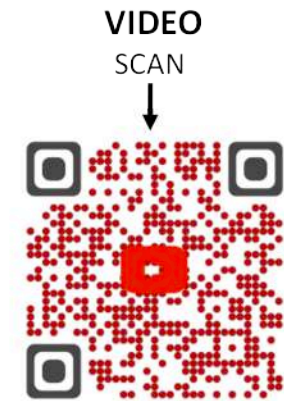



AX1619
Adventure Skid Plate
BMW GS1250



IMPORTANT ! Make sure to respect the way to place each of the plastic mounts exactly like the following pictures

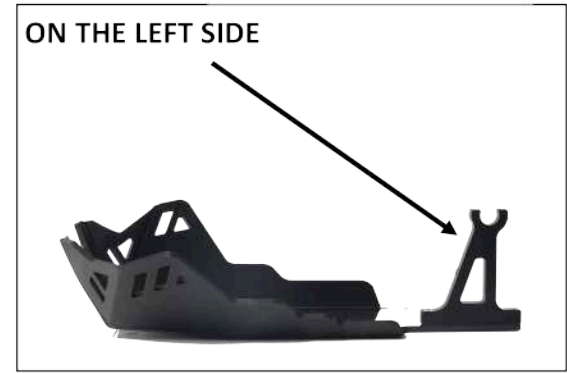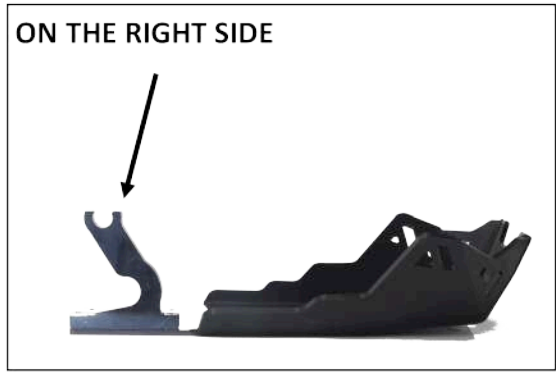

IMPORTANT ! The « B » part has to be placed like picture « **2A** », not like picture « **2B** »

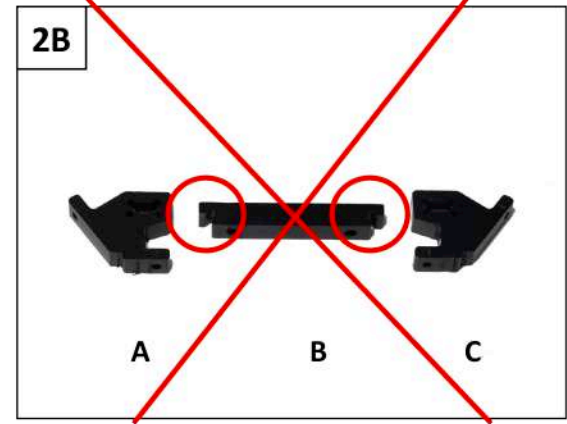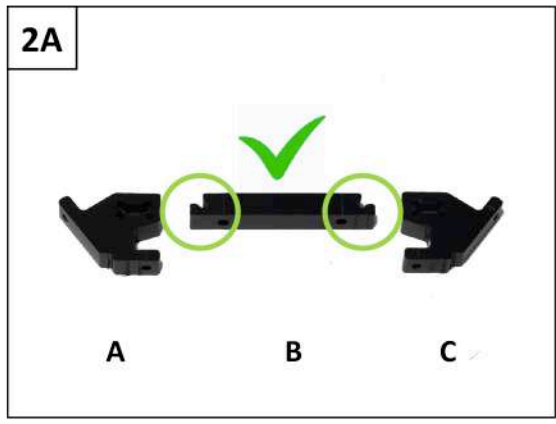



3
4 Tfhc 6x25mm + 4 Em6f + 4 M6 Washers



4.1
Fix the plastic block on the skid plate with 3 Tfhc 6x40mm + 3 Em6f + 3 M6 Washers




4.2
Fix the plastic block on the skid plate with 3 Tfhc 6x40mm + 3 Em6f + 3 M6 Washers



5
Fit the rear mount around the frame rear tube



6
Place the front Tbhsc 8x35mm screws with M8 Washers

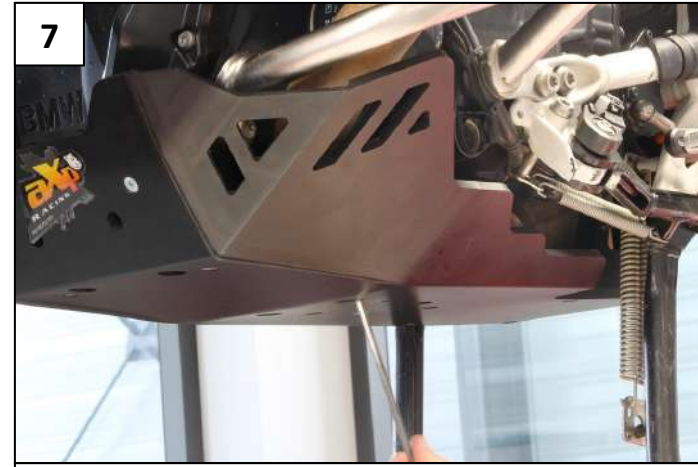

7
Place the 3 Tbhsc 8x50mm screws in the middle of the skid plate with M8 Washers and tight everything

YOU CAN FIND MORE CONTENT ON OUR SOCIAL MEDIA AND FIND TUTORIAL VIDEOS ON YOUTUBE

