



AX1628

KTM 1290 SUPER ADV R/ S
ADVENTURE SKID PLATE



WARNING ! We do our best to supply quality parts but we recommend to wear gloves to avoid any sharped edges ! Thank you !

- 1 PM01-10-015 Plastic block 30mm
- 1 PM01-04-224 Plastic block 20mm
- 1 PM01-07-056 MUD Guard
- 2 PM03-04-111 Alloy brackets
- 1 PM01-04-225 Plastic block 20mm
- 1 PM01-04-226 Plastic block 20mm
- 4 PM01-07-057 Plastic spacers 6mm
- 1 PM03-04-112 Alloy plate
- 1 NE04-01-199 Sticker
- 5 NE01-04-002 Clamped bolts
- 10 NE01-04-003 Em6f
- 12 NE01-03-001 M6 Washers
- 8 NE01-02-003 Tfhc 6x25mm
- 4 NE01-02-004 Tfhc 6x30mm
- 4 NE01-02-023 Tfhc 6x12mm
- 2 NE01-01-005 Tbhc 8x35mm
- 4 NE01-03-002 M8 Washers
- 3 NE01-06-013 Th 6x40mm
- 1 NE01-01-014 Tbhc 8x50mm
- 1 NE01-04-001 Em8f
- 2 NE01-11-001 Screws with spacer
- 1 NE01-03-006 M6 Large washer



SCAN THE QR CODE TO
WATCH THE TUTORIAL VIDEO



1 Remove the OEM skid plate and keep the front fixation




2 Place the clamped bolts as shown (2) and fix it on the bike on left and right sides using the OEM screws + M6 Washers + Em6f (3)



4 Position the clamped bolts as shown (4) and push them to the bottom (5)

6 Prepare step (7) with Tbhc 8x50mm + 2 M8 Washers + 1 Em8f

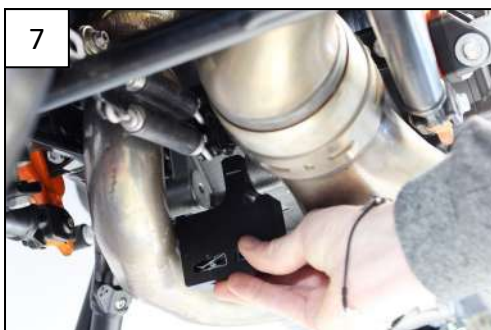

7

8

9



10



11



12

Use the 30mm thick block + alloy 4mm thick plate to fit on the engine case with Tbhcs 8x35mm + M8 Washers

Fix the four 6mm thick spacers with Tfhcs 6x12mm by auto drilling (13) (14)



13



14



15

Fix the 20mm thick plastic block with Tfhcs 6x30mm + M6 Washers + em6f

Fix the 20mm thick plastic block with Tfhcs 6x30mm + M6 Washers + em6f



16



17



18

Fix the 20mm thick plastic block with Tfhcs 6x25mm + M6 Washers + em6f

Th 6x40mm + M6 Large washer

Screws with spacers



19



20



21

Th 6x40mm + M6 Washers

Link the skid plate to the alloy brackets with Tfhcs 6x25mm

Tfhcs 6x30mm



This skid plate fits with OEM crash bars and OEM center stand

www.axp-racing.com