



**AX1668**


Skid Plate 6mm

KTM 125SX | HVA TC125



YouTube

- 2 NE01-11-001 - Front screws
- 2 NE01-04-002 - Calmped bolts
- 2 NE01-02-002 - Tfhc 6x20mm
- 1 NE01-02-003 - Tfhc 6x25mm
- 1 NE01-02-004 - Tfhc 6x30mm
- 2 NE01-03-001 - M6 Washers
- 2 NE01-04-003 - Em6f
- 1 PM01-04-233 - Rear mount
- 1 PM01-04-234 - Front mount
- 1 PM01-04-237 - Large block
- 1 NE04-01-222 - Sticker

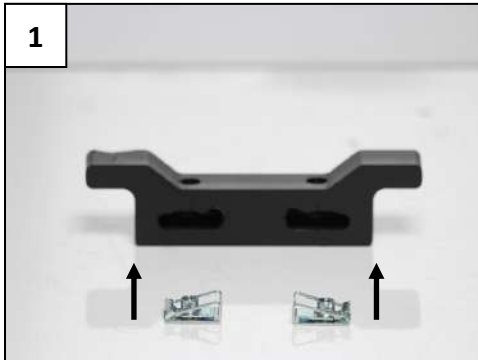


Remove the OEM plastic  
*Retirer le cache plastique*



1 Tfhc 6x25mm	1 Tfhc 6x30mm
1 M6 Washer	1 M6 Washer
1 Em6f	1 Em6f

Fit by autodrilling with the 2 Tfhc 6x20mm  
*Fixer par auto perçages avec les 2 Tfhc 6x20mm*

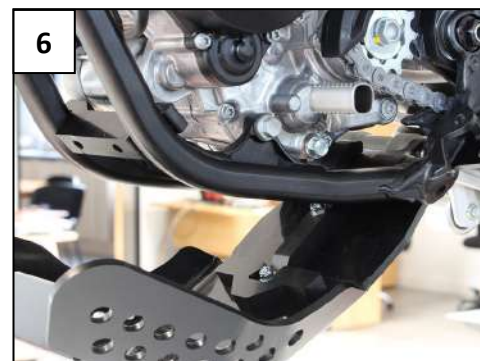

Move it to the top until it's blocked  
*Faire remonter la bride jusqu'à ce qu'elle soit bloquée*