




AX1671

Black Xtrem skid plate
KTM 125SX / 125XC-HVA TC125





- 2 NE01-11-001 - Front screws
- 2 NE01-04-002 - Clamped bolts
- 2 NE01-02-002 - Tfhc 6x20mm
- 2 NE01-02-003 - Tfhc 6x25mm
- 4 NE01-03-001 - M6 Washers
- 4 NE01-04-003 - Em6f
- 1 PM01-04-234 - Front bracket
- 1 PM03-04-113 - Rear mount
- 1 PM01-06-063 - Plastic N°40
- 1 NE04-01-225 - Sticker

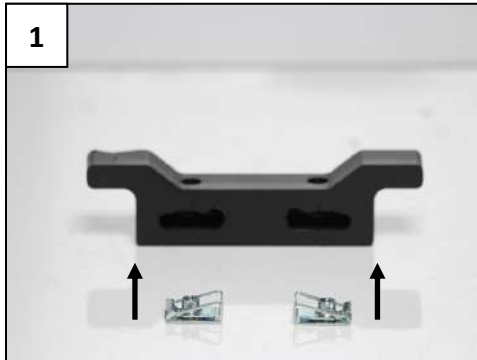

2
Remove the OEM plastic
Retirer la cache plastique



3
Move it to the top until it's blocked
Faire remonter la bride jusqu'à ce qu'elle soit bloquée

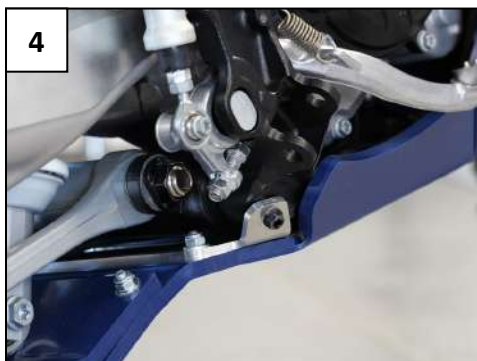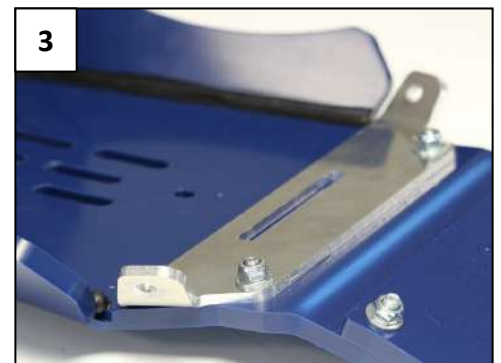

4
Fix the rear with OEM screws
Fixer l'arrière avec les vis d'origine



5
Fit the front screws
Mettre les vis avant en place



6
Put the rear plate
Mettre la plaque arrière
Tfhc 6x25mm + em6f + M6 Washers