




AX1673

Blue Xtrem skid plate
HVA TC125





2 NE01-11-001 - Front screws
2 NE01-04-002 - Clamped bolts
2 NE01-02-002 - Tfhc 6x20mm
2 NE01-02-003 - Tfhc 6x25mm
4 NE01-03-001 - M6 Washers
4 NE01-04-003 - Em6f
1 PM01-04-234 - Front bracket
1 PM03-04-113 - Rear mount
1 PM01-06-063 - Plastic N°40
1 NE04-01-227 - Sticker

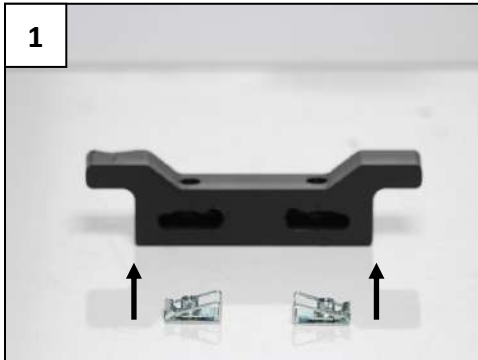

Remove the OEM plastic
Retirer la cache plastique



Move it to the top until it's blocked
Faire remonter la bride jusqu'à ce qu'elle soit bloquée

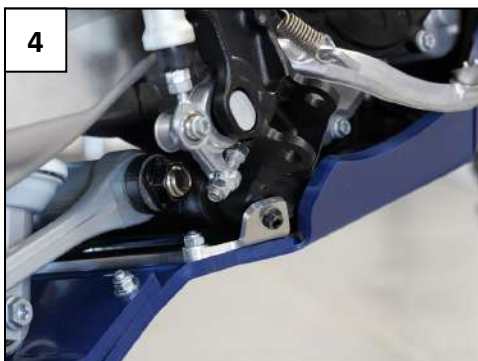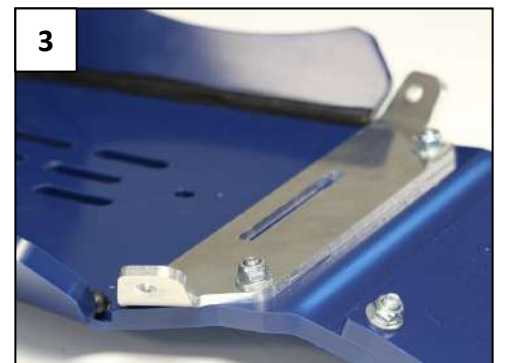

Fix the rear with OEM screws
Fixer l'arrière avec les vis d'origine



Fit the front screws
Mettre les vis avant en place



Put the rear plate
Mettre la plaque arrière
Tfhc 6x25mm + em6f + M6 Washers