



AX1689

ADVENTURE SKID PLATE
DUCATI DESERT X




- 4 NE01-02-002 - TFHC 6x20mm
- 16 NE01-04-003 - Em6f
- 16 NE01-03-001 - M6 Washers
- 8 NE01-02-004 - TFHC 6x30mm
- 2 NE01-02-005 - TFHC 6x35mm
- 4 NE01-04-002 - Clamped bolts
- 2 NE01-02-006 - TFHC 6x40mm
- 2 NE01-02-003 - TFHC 6x25mm
- 2 NE01-03-006 - M6 Large washers
- 2 NE01-05-010 - TCHC 12x25mm
- 2 NE01-03-007 - M12 Washers
- 2 NE01-06-001 - TH 6x45mm
- 2 NE01-06-013 - TH 6x40mm
- 4 NE10-01-004 - Alloy spacers

- 1 NE04-01-238 - STICKER
- 1 PM03-04-117 - Alloy bracket
- 1 PM01-06-072 - Side stand guard
- 1 PM01-04-239
- 1 PM01-04-240
- 1 PM01-04-241
- 1 PM01-04-242
- 1 PM01-04-243
- 1 PM01-06-073
- 1 PM01-06-074
- 1 NE13-01-002 - Foam


**TUTORIAL
VIDEO**




WARNING : This skid plate will fit without crash bars and **ONLY** with **Hepco & Becker** crash bars. If you think you made a mistake, do not try to fit and contact us at : contact@axpracing.com

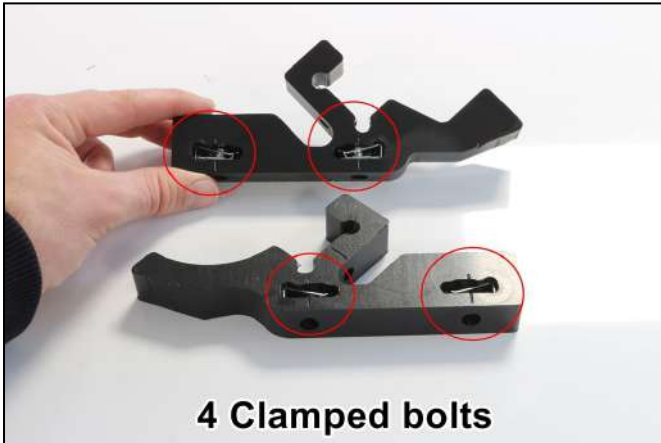


4 Clamped bolts

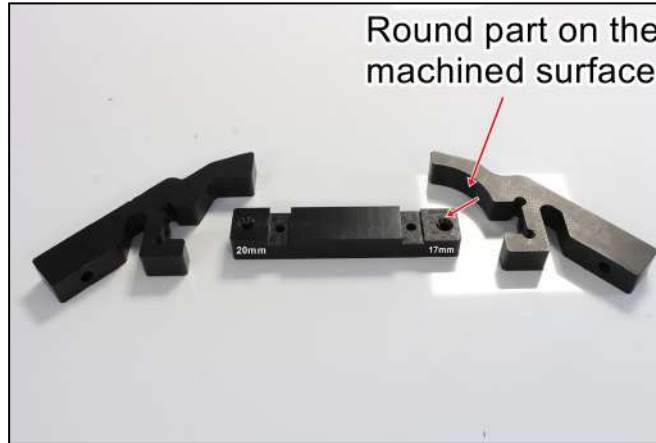


Round part on the machined surface

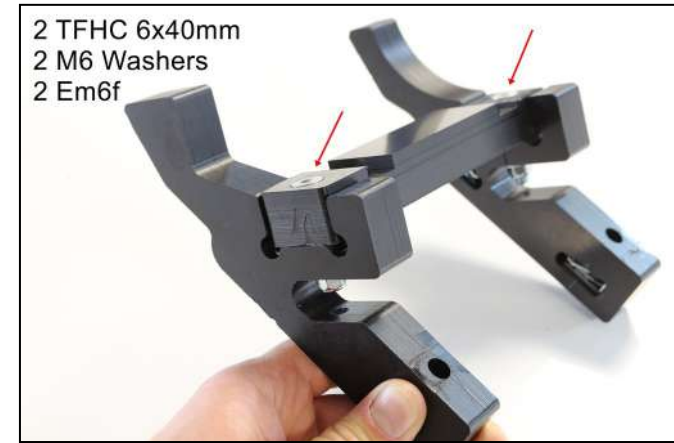


2 TFHC 6x40mm
2 M6 Washers
2 Em6f

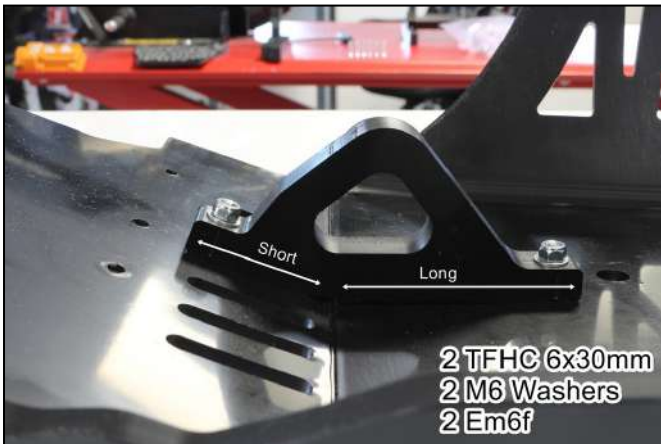

2 TFHC 6x30mm
2 M6 Washers
2 Em6f

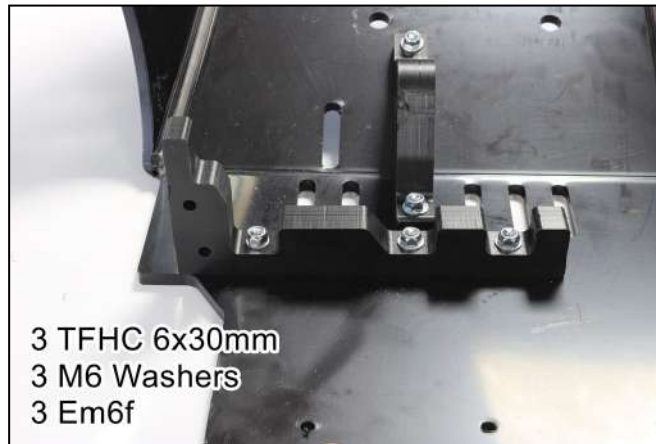

3 TFHC 6x30mm
3 M6 Washers
3 Em6f

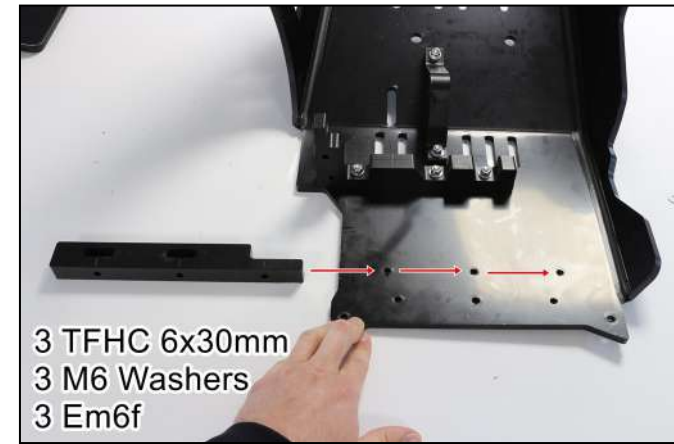

3 TFHC 6x30mm
3 M6 Washers
3 Em6f

