



# AX1708

## Skid plate

### Surron - LightBee

# Assembling instructions

## What's in the box ?

- 4 NE01-04-003 - EM6F bolts
- 4 NE01-03-001 - EM6 washers
- 6 NE01-02-003 - TFHC 6x25 screws
- 6 NE01-02-001 - TFHC 6x16 screws
- 2 NE01-02-004 - TFHC 6x30 screws
- 2 NE01-01-004 - TBHC 8x25 screws
- 2 NE01-04-001 - EM8F bolts
- 4 NE01-04-002 - Clamped bolts
- 1 PM01-04-263 - Front left fixation
- 1 PM01-04-264 - Front right fixation
- 1 PM01-04-265 - Rear left hook
- 1 PM01-04-266 - Rear right hook
- 1 PM01-07-068 - Left cover
- 1 PM01-07-069 - Right cover
- 1 NE04-01-246 - Sticker



The paper instructions may be limitless, a tutorial video is available online to help you.

The pictures might not represent the same skid plate but the fitment is similar.



Approximate time of assembly: 15 minutes.

A skid plate is made to protect the vital components of your bike and does not have a « life warranty ». However, production default may happen and we cover it during the first year of use.

In case of premature breakage, please write to [contact@axpracing.com](mailto:contact@axpracing.com)

## Follow the steps !



Place the clamped bolts inside the front fixations.




Place the rear hooks with the machined faces on the outside.




3

Place the smaller screw (6x25mm) in the bottom hole, the 6x30 screw on top and tighten.

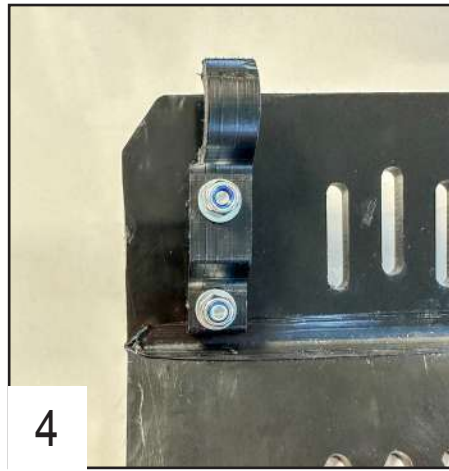


4

Repeat the operation on the other side.

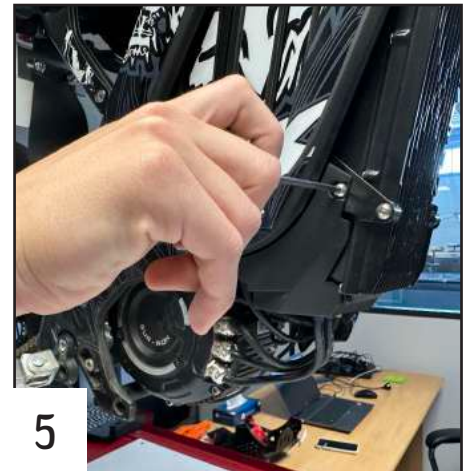


5

Remove the plastic protection.

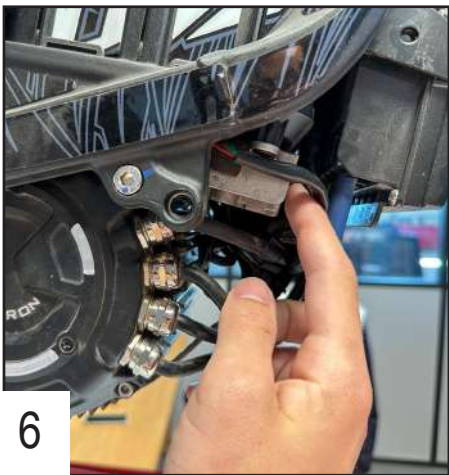


6

Lift the cable up.

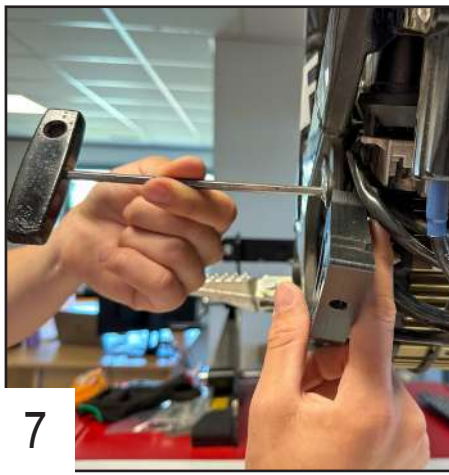


7

Place the front right fixation using 8x25 screw + EM8F bolt and tighten.

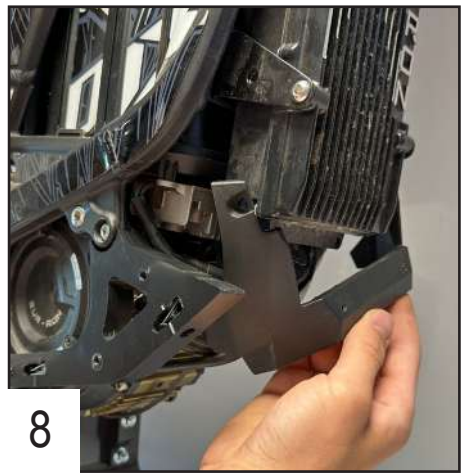


8

Place the plastic protection back and fix the second front fixation on the left side.

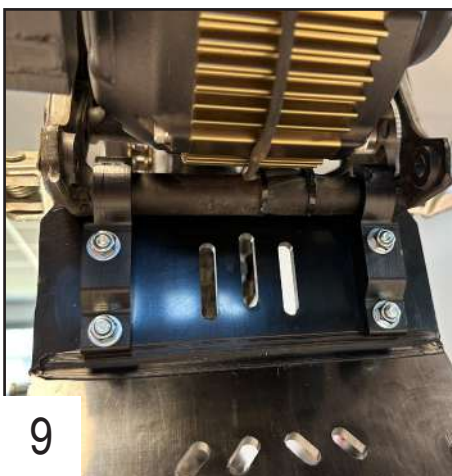


9

Insert the plate on the frame using the 2 hooks.

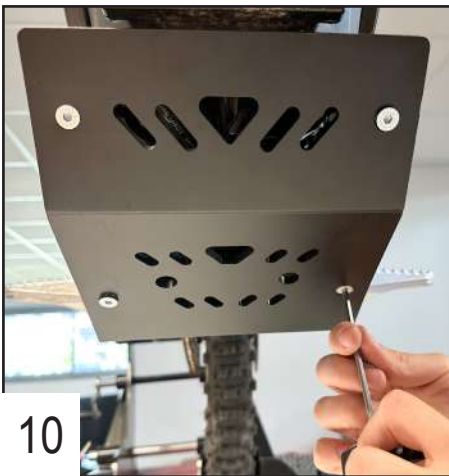

10

Lift the plate up and tighten the four 6x25 screws.

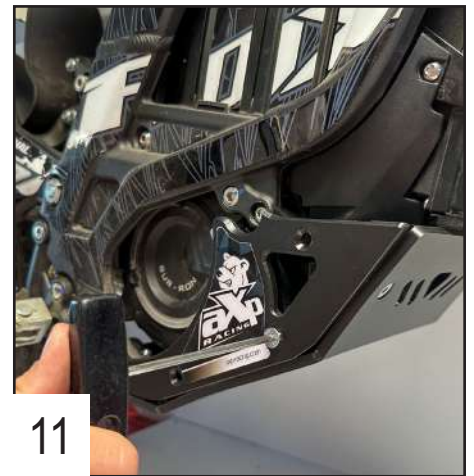

11

Place the stickers and fix the cover using the three 6x16 screws. Repeat the operation on the other side.

**You're all ready to ride !**