



AX1717

Chain guide

Yamaha

Assembling instructions

What's in the box ?

- 5 NE10-01-004 - Alloy spacers
- 2 NE01-03-001 - M6 washers
- 4 NE01-04-003 - EM6F bolts
- 2 NE01-02-013 - TFHC 6x60mm
- 2 NE01-06-004 - TH 6x60mm
- 1 NE01-06-026 - TH 6x16mm



The paper instructions may be limitless, scan the QR code to watch the tutorial video online.



Approximate time of assembly: 15 minutes.

Chain guards are made to protect the vital components of your bike and does not have a « life warranty ». If you notice a defect on your chain guard at reception, please write to contact@axpracing.com

Follow the steps



1

Place the 3 alloy spacers in the top holes of the biggest part.




2




3

Place the 2 alloy spacers in the top holes of the smallest part.

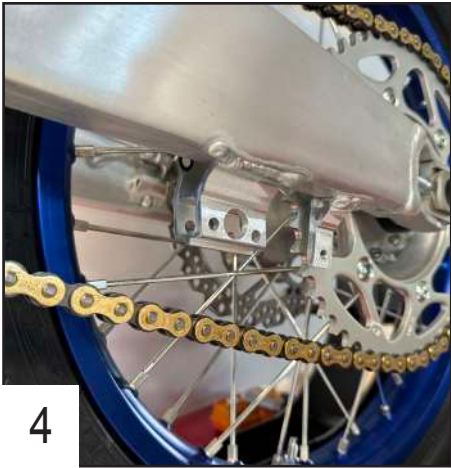


4

Remove the OEM chain guide.

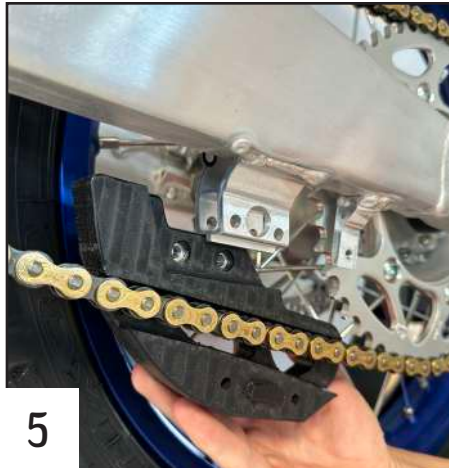


5

Place the small part behind the chain and slide to align it to the swingarm holes.

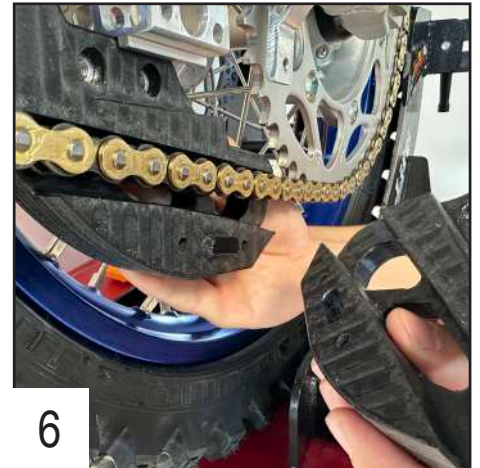

6

Clip the big plastic part on the other side of the chain.

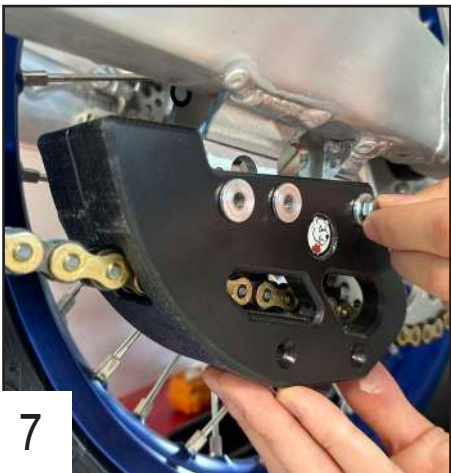


7

Place the TH 6x16mm in the top right hole.




8

Place the TH 6x60mm in the 2 top holes using the EM6F bolts.

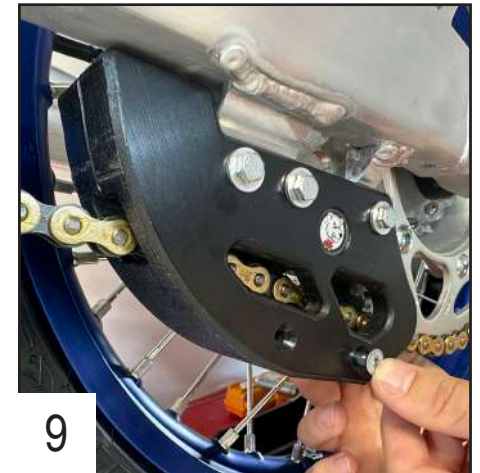


9

Place the 2 TFHC 6x60mm in the bottom holes using M6 washers and EM6F bolts.

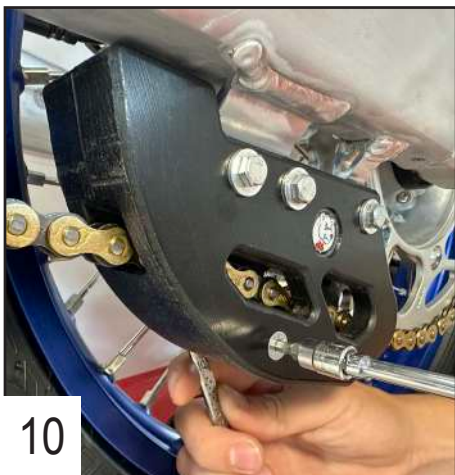

10

Tighten all the screws.

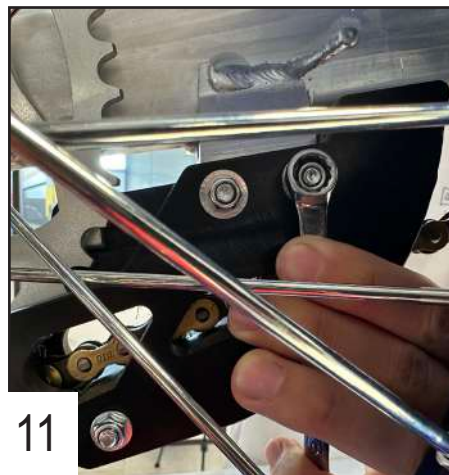

11

**You're
all ready
to ride !**