



AX1719

Front A-Arms guards

Polaris RZR XP1000 Sport

Assembling instructions

What's in the box ?

- 8 NE01-04-003 - EM6F bolts
- 8 NE01-03-006 - Large M6 washers
- 4 NE01-02-005 - TFHC 6x35mm screws
- 4 NE01-02-006 - TFHC 6x40mm screws
- 4 PM01-04-271 - HDPE brackets
- 2 NE04-01-009 - Round stickers




The paper instructions may be limitless, scan the QR code to watch the tutorial video online.



Approximate time of assembly: 30 minutes.

Front A-Arms guards are made to protect the vital components of your SSV and do not have a « life warranty ». If you notice a defect on your front A-Arms guards at reception, please write to contact@axpracing.com

Follow the steps

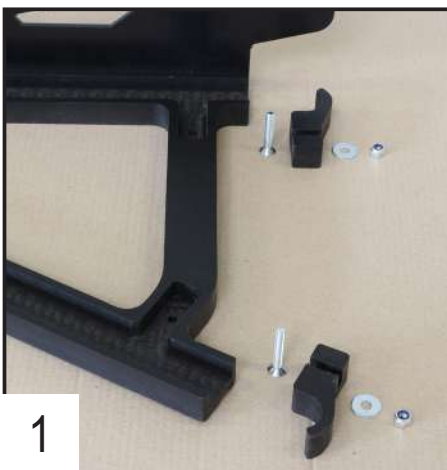

1



2



3

Separate the screws and bolts:
The HDPE brackets + TBHC6x40mm screws, bolts and washers go on the engine's side. The TBHC 6x35mm screws, bolts + washers go on the tyre's side.

Place the guard on the arm.



Place the TBHC 6x35mm screws + bolts and washers.



Tighten the screws.




Place the plastic bracket on the back tube.



The bracket must be in the machined face.



Use the TBHC 6x40mm screws, bolts and washers to fix the guard on the larger side.

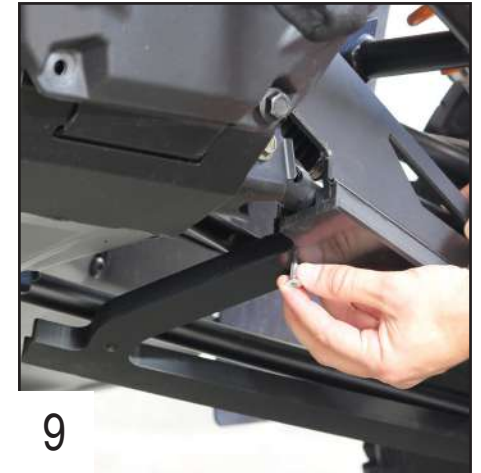

Tighten the screws.



Repeat the operation on the other side.

**You're
all ready
to ride !**