



AX1725

Radiator braces

Fantic

Assembling instructions

What's in the box ?

- 6 NE01-03-001 - M6 washers
- 4 NE01-01-008 - TBHC 6x25mm screws
- 2 NE01-01-009 - TBHC 6x20mm screws



The paper instructions may be limitless, scan the QR code to watch the tutorial video online.



Approximate time of assembly: 15 minutes.


Radiator guards are made to protect the vital components of your bike and does not have a « life warranty ». If you notice a defect on your radiator guards at reception, please write to contact@axpracing.com

Follow the steps




1

Remove the plastic protections on both sides.

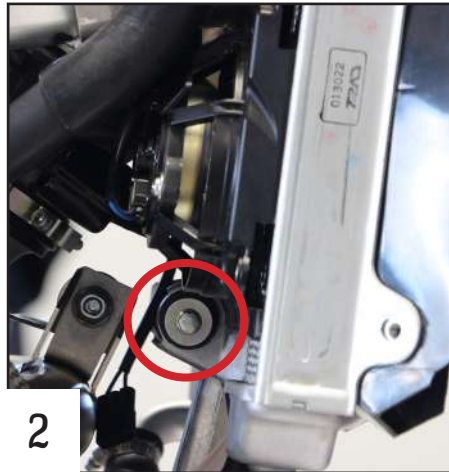


2

Remove the OEM screw.

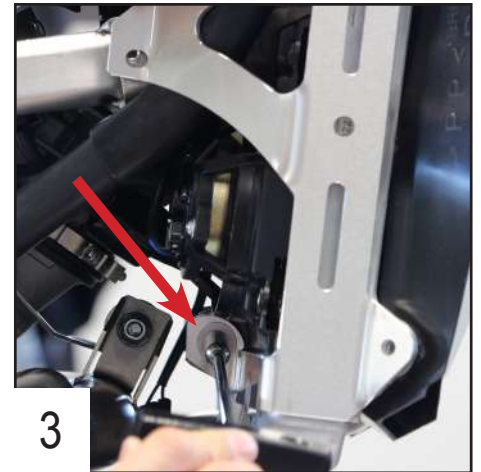


3

Place the aluminium guard on the radiator using the OEM screw.

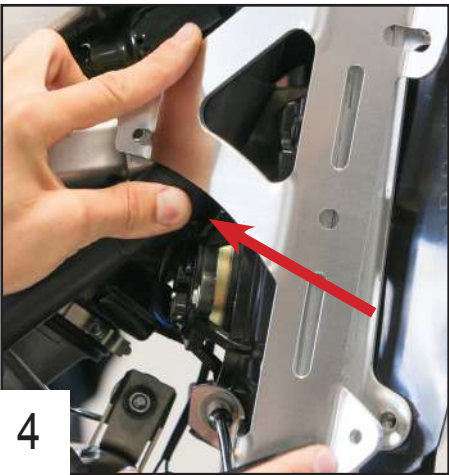


4

Pinch the hose for an easier mounting.

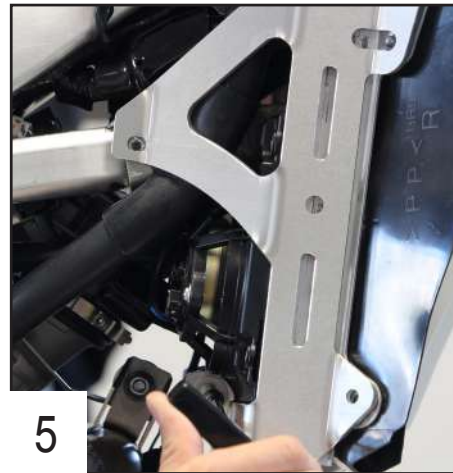

5

Tighten the OEM screw.

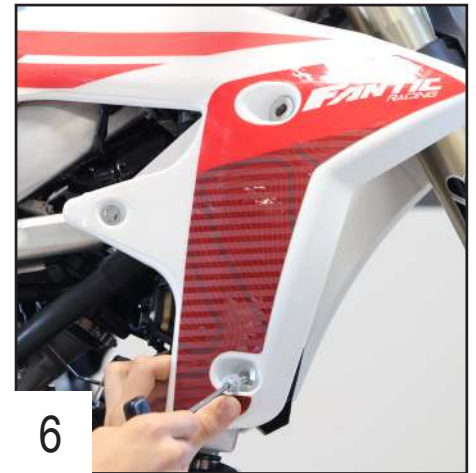

6

Place the plastic protection back in place and use the TBHC 6x25mm + M6 washer in the bottom hole.



7

Place the TBHC 6x25mm screw + M6 washer in the top hole.



8

Use the screwdriver to place the plastic correctly.



9

Use the 6x20mm screw + M6 washer and tighten all the screws. Then, repeat the operation on the other side.

You're all ready to ride !