



AX1734

Skid plate

Kawasaki KX500

Assembling instructions

What's in the box ?

- 2 NE01-11-001 - Special screws
- 4 NE01-04-003 - EM6F bolts
- 4 NE01-03-001 - M6 washers
- 4 NE01-02-004 - TFHC 6x30mm screws
- 2 NE01-04-002 - Clamped bolts
- 1 PM02-01-036 - Front steel fixation
- 1 PM01-10-021 - Rear hook 30mm
- 1 PM01-04-275 - Rear fixation 20mm
- 1 NE04-01-260 - Sticker



The paper instructions may be limitless, a tutorial video is available online to help you.

Scannez le QR code pour regarder la vidéo de montage.



Approximate time of assembly: 15 minutes.

A skid plate is made to protect the vital components of your bike and does not have a « life warranty ». However, production default may happen and we cover it during the first year of use.


In case of premature breakage, please write to contact@axpracing.com

Follow the steps !




1


Place the clamped bolts in the front steel fixation.

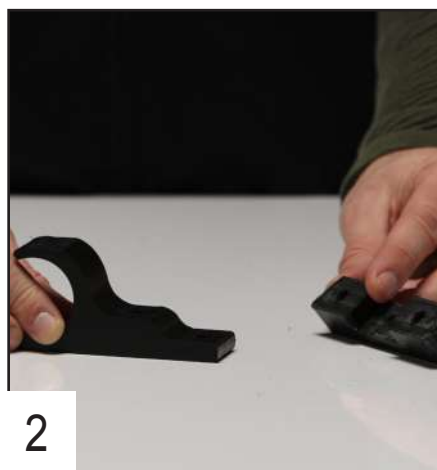

2

Clip the rear fixation and the hook together. Make sure that the longest side is on top.

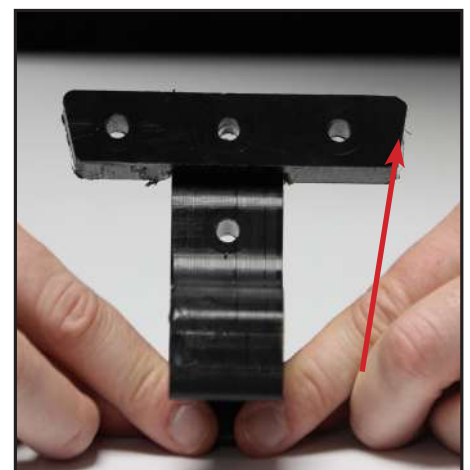


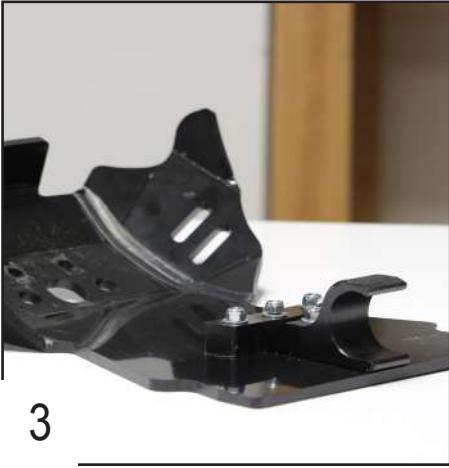

Place the rear fixation on the skid plate and fix it using the TFHC 6x30mm screws + EM6F bolts and M6 washers.



Place the front steel fixation in the frame. It must rest on the welds.

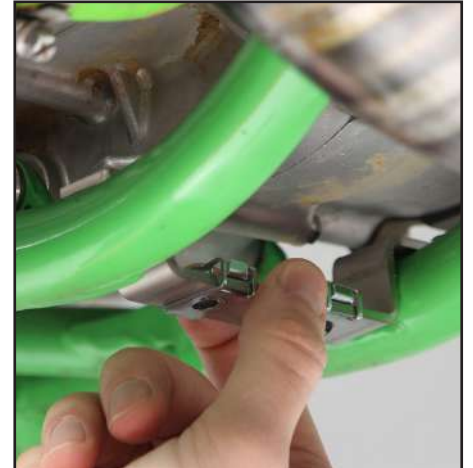

Clip the hook on the frame and lift the skid plate to put it in the correct position.



Put the first special screw in the front hole. Use the big hole to maintain the fixation in place.



Place the second special screw.



Tighten the screws.

**You're
all ready
to ride !**