



# AX1735

Skid plate  
TM Racing MX85

# Assembling instructions

## What's in the box ?

- 2 NE01-11-001 - Special screws
- 4 NE01-04-003 - EM6F bolts
- 4 NE01-03-001 - M6 washers
- 4 NE01-02-005 - TFHC 6x35mm
- 2 NE01-04-002 - Clamped bolts
- 1 PM02-01-038 - Front steel fixation
- 1 PM01-10-022 - Rear hook 30mm
- 1 PM01-04-276 - Rear fixation 20mm
- 1 NE04-01-261 - Sticker



The paper instructions may be limitless, a tutorial video is available online to help you.

Scannez le QR code pour regarder la vidéo de montage.



Approximate time of assembly: 15 minutes.

A skid plate is made to protect the vital components of your bike and does not have a « life warranty ». However, production default may happen and we cover it during the first year of use.

In case of premature breakage, please write to [contact@axpracing.com](mailto:contact@axpracing.com)

## Follow the steps !



1

Place the clamped bolts in the front steel fixation.



2


Clip the rear fixation and the hook together.






3

Place the rear fixation on the skid plate and fix it using the TFHC 6x35mm screws + EM6F bolts and M6 washers.

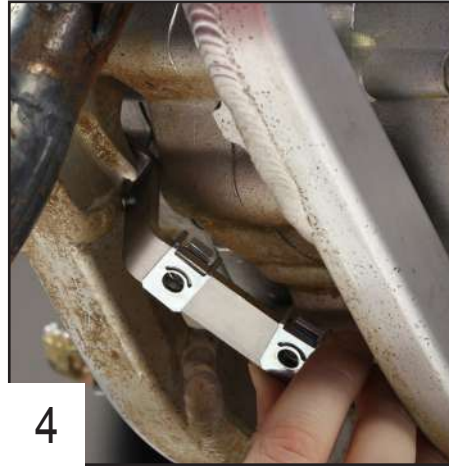


4

Place the front steel fixation in the frame. The insertion can be tricky, make sure to place the left side first.

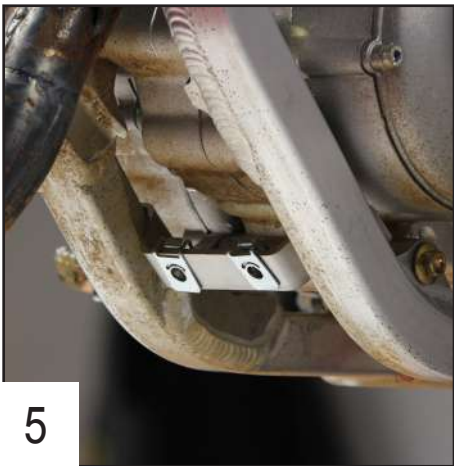


5

The fixation must rest on the welds.

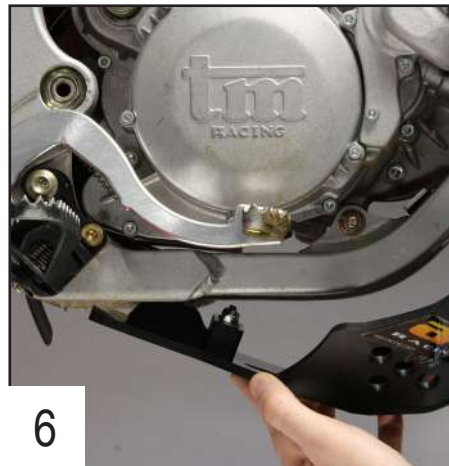

6

Clip the hook on the frame and lift the skid plate to put it in the correct position.

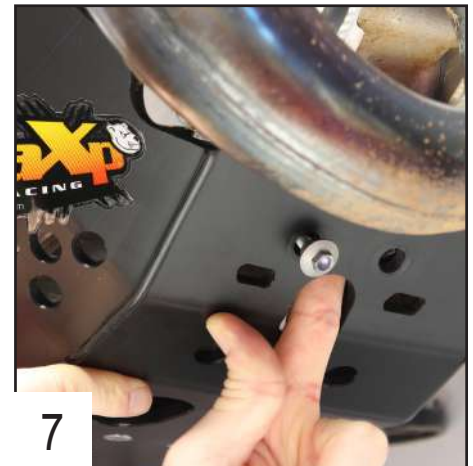

7

Put the first special screw in the front hole. Use the big hole to maintain the fixation in place.



8

Place the second special screw and tighten.

**You're  
all ready  
to ride !**