



AX1741

Full frame skid plate Polaris Sportsman 570

Assembling instructions

What's in the box ?

- 2 PM01-05-026 - HDPE 15mm long brackets
- 2 PM01-05-027 - HDPE 15mm short brackets
- 2 PM03-04-132 - Alloy small plate
- 1 PM01-09-019 - HDPE 10mm triangle - left
- 1 PM01-09-020 - HDPE 10mm triangle - right
- 2 NE01-01-009 - TBHC 6x20mm
- 14 NE01-03-006 - Large M6 washers
- 4 NE01-04-003 - EM6F bolts
- 4 NE01-03-001 - M6 washers
- 4 NE01-02-003 - TFHC 6x25mm
- 3 NE01-06-026 - TH 6x25mm
- 12 NE01-04-002 - Clamped bolts
- 2 NE01-06-023 - TH 8x25mm
- 4 NE01-03-002 - M8 washers
- 2 NE01-04-001 - M8 bolts
- 9 NE01-06-013 - TH 6x40 zing



Watch the tutorial video online to help you.

Scannez le QR code pour regarder la vidéo de montage.




Approximate time of assembly: 30 minutes.

The full frame skid plate is made to protect the vital components of your UTV and does not have a « life warranty ». However, production default may happen and we cover it during the first year of use.

In case of premature breakage, please write to contact@axpracing.com

x2 TBHC 6x20mm
x2 M6 Large washers

Place all the screws and bolts in the correct spot and watch the tutorial video online to mount the guard on your vehicle.

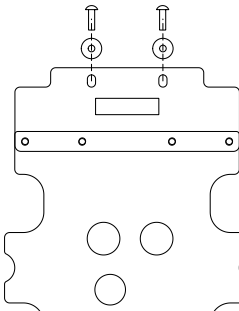

x1 Th 6x25mm
x1 M6 Large washer
x1 Alloy plate
x1 Clamped bolt


x1 Em6f
x1 M6 Washers
x1 Tfhc 6x25mm

x1 Em6f
x1 M6 Washers
x1 Tfhc 6x25mm

x2 Th 8x25mm
x4 M8 Washers
x2 Em8f

x8 Th 6x40mm
x8 M6 Large washers
x8 Clamped bolts

x2 Tfhc 6x25mm

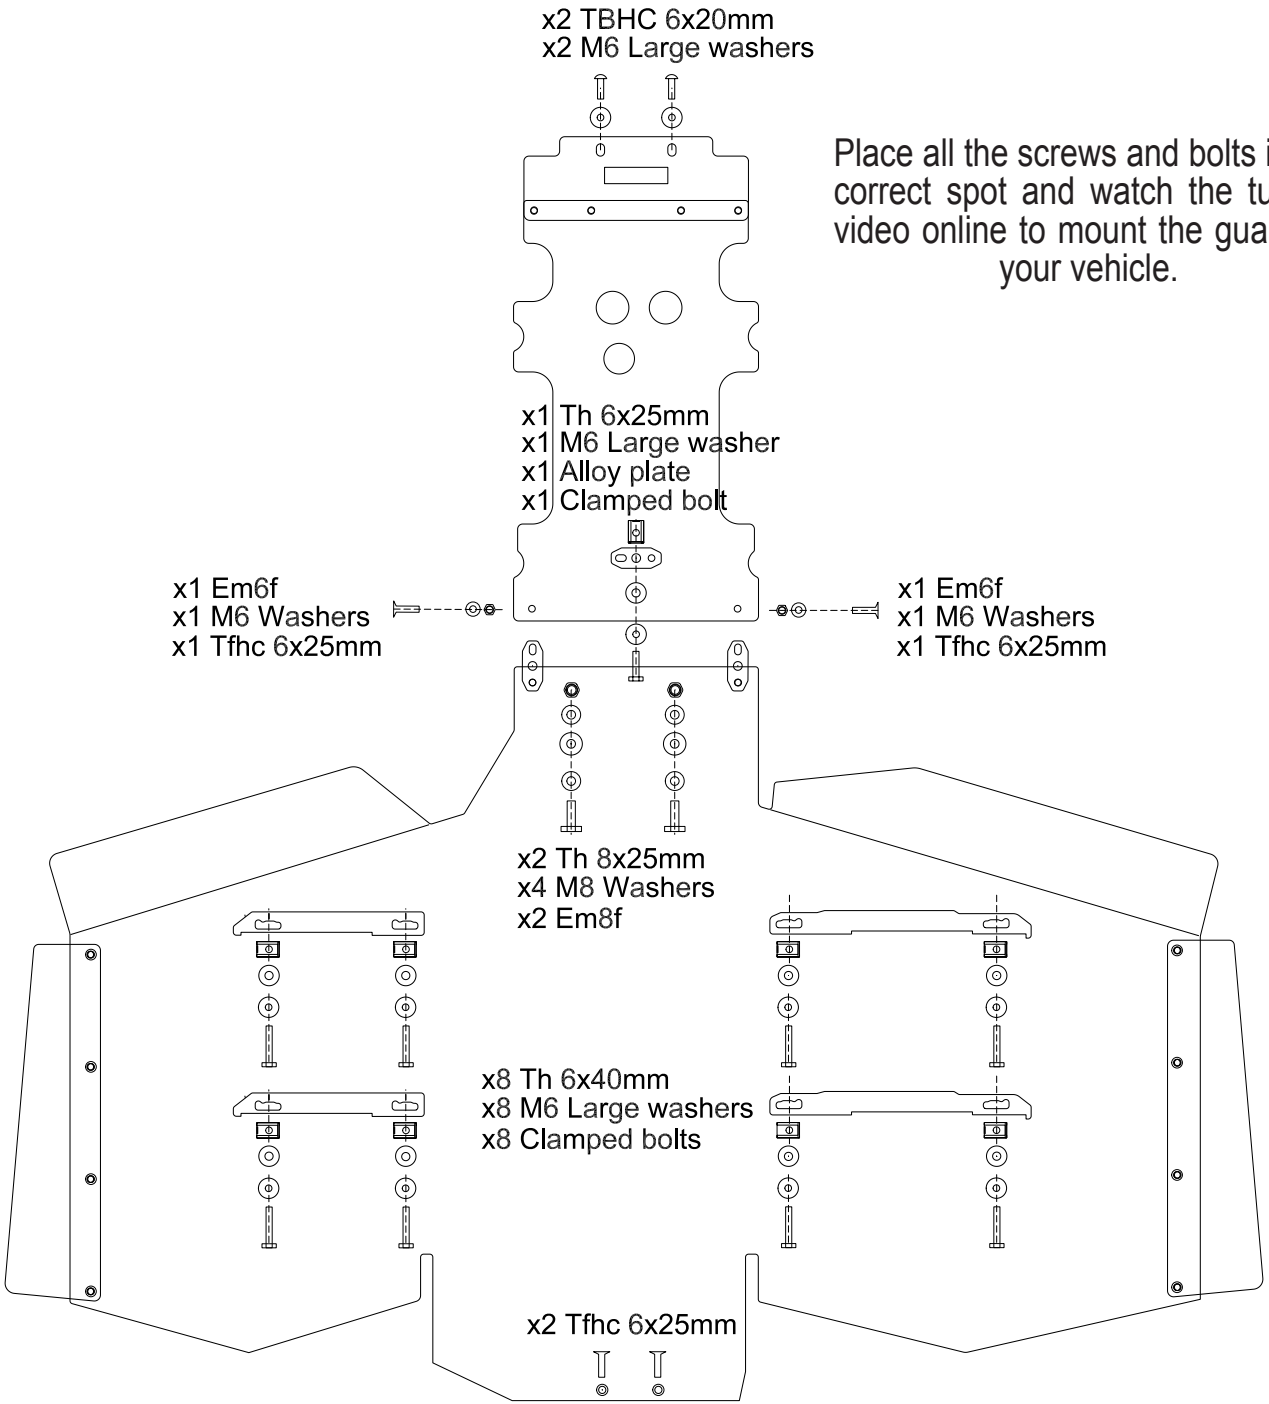

x1 Th 6x40mm
x1 M6 Large washer
x1 Clamped bolt
x1 Alloy plate

x2 Em6f
x2 M6 Washers
x2 Plastic parts
x2 M6 Large washer
x2 Th 6x25mm

