



AX1745

Skid plate

Husqvarna TC65 / KTM
65SX / GasGas MC65

Assembling instructions

What's in the box ?

- 2 PM01-04-282 - Rear hook
- 1 PM01-04-283 - PEHD front fixation
- 1 NE04-01-264 - Sticker
- 2 NE01-11-001 - Special screws
- 4 NE01-04-003 - EM6F bolts
- 4 NE01-03-001 - M6 washers
- 2 NE01-04-002 - Clamped bolts
- 4 NE01-02-003 - TFHC 6x25mm screws



The paper instructions may be limitless, a tutorial video is available online to help you.

Scannez le QR code pour regarder la vidéo de montage.



Approximate time of assembly: 15 minutes.

A skid plate is made to protect the vital components of your bike and does not have a « life warranty ». However, production default may happen and we cover it during the first year of use.

In case of premature breakage, please write to contact@axpracing.com

Follow the steps !



1

Place the clamped bolts in the front fixation.




2

Place the 2 plastic hooks on the rear of the skid plate using TFHC 6x25mm screws + M6 washers and EM6F bolts, then tighten.




3

Place the front fixation in the frame and clip it inside the bars.

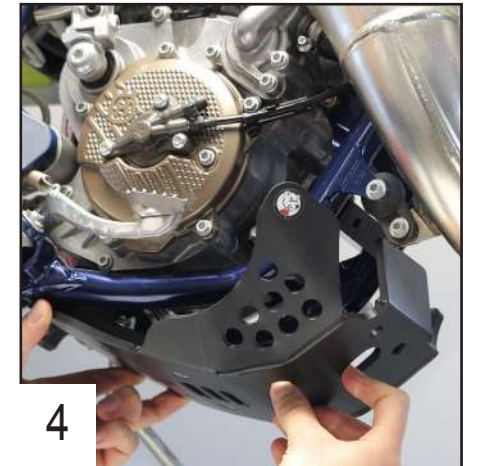


4

Clip the rear hooks on the frame.

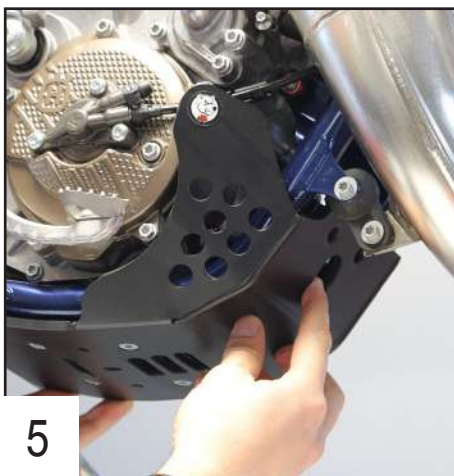


5

Lift the skid plate up to put the special screws in.

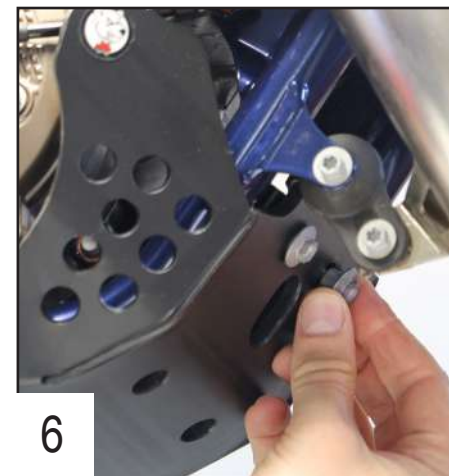

6

Place the 2 special screws in the front holes.

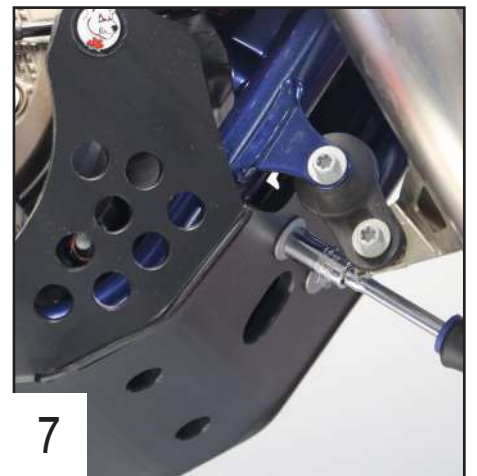

7

Tighten the screws.

You're all ready to ride !