



AX1747

Front & Rear A-arm guards Polaris Sportsman 570

Assembling instructions

Front A-arm guards:

- 1 PM01-10-025 - HDPE 30mm brackets - left
- 1 PM01-10-026 - HDPE 30mm brackets - right
- 2 PM01-10-027 - HDPE 30mm brackets
- 6 NE01-07-008 - TRCC 6x50mm
- 6 NE01-04-003 - EM6F bolts
- 6 NE01-03-001 - M6 washers



Watch the tutorial videos online to help you.

Scannez le QR code pour regarder les vidéos de montage.



Rear A-arm guards:

- 4 PM01-04-281 - HDPE 20mm brackets
- 2 PM01-05-025 - HDPE 15mm rectangles
- 2 PM01-06-081 - HDPE 8mm rectangles
- 4 NE01-07-007 - TRCC 6x70mm
- 8 NE01-03-001 - M6 washers
- 8 NE01-04-003 - EM6F bolts
- 4 NE01-07-005 - TRCC 6x35mm



Approximate time of assembly: 15 minutes each.

Front & Rear A-arm guards are made to protect the vital components of your UTV and do not have a « life warranty ». However, production default may happen and we cover it during the first year of use.


In case of premature breakage, please write to contact@axpracing.com

Front A-arm guards



Place all the screws and bolts in the correct spot and watch the tutorial video online to mount the guard on your vehicle.

Rear A-arm guards

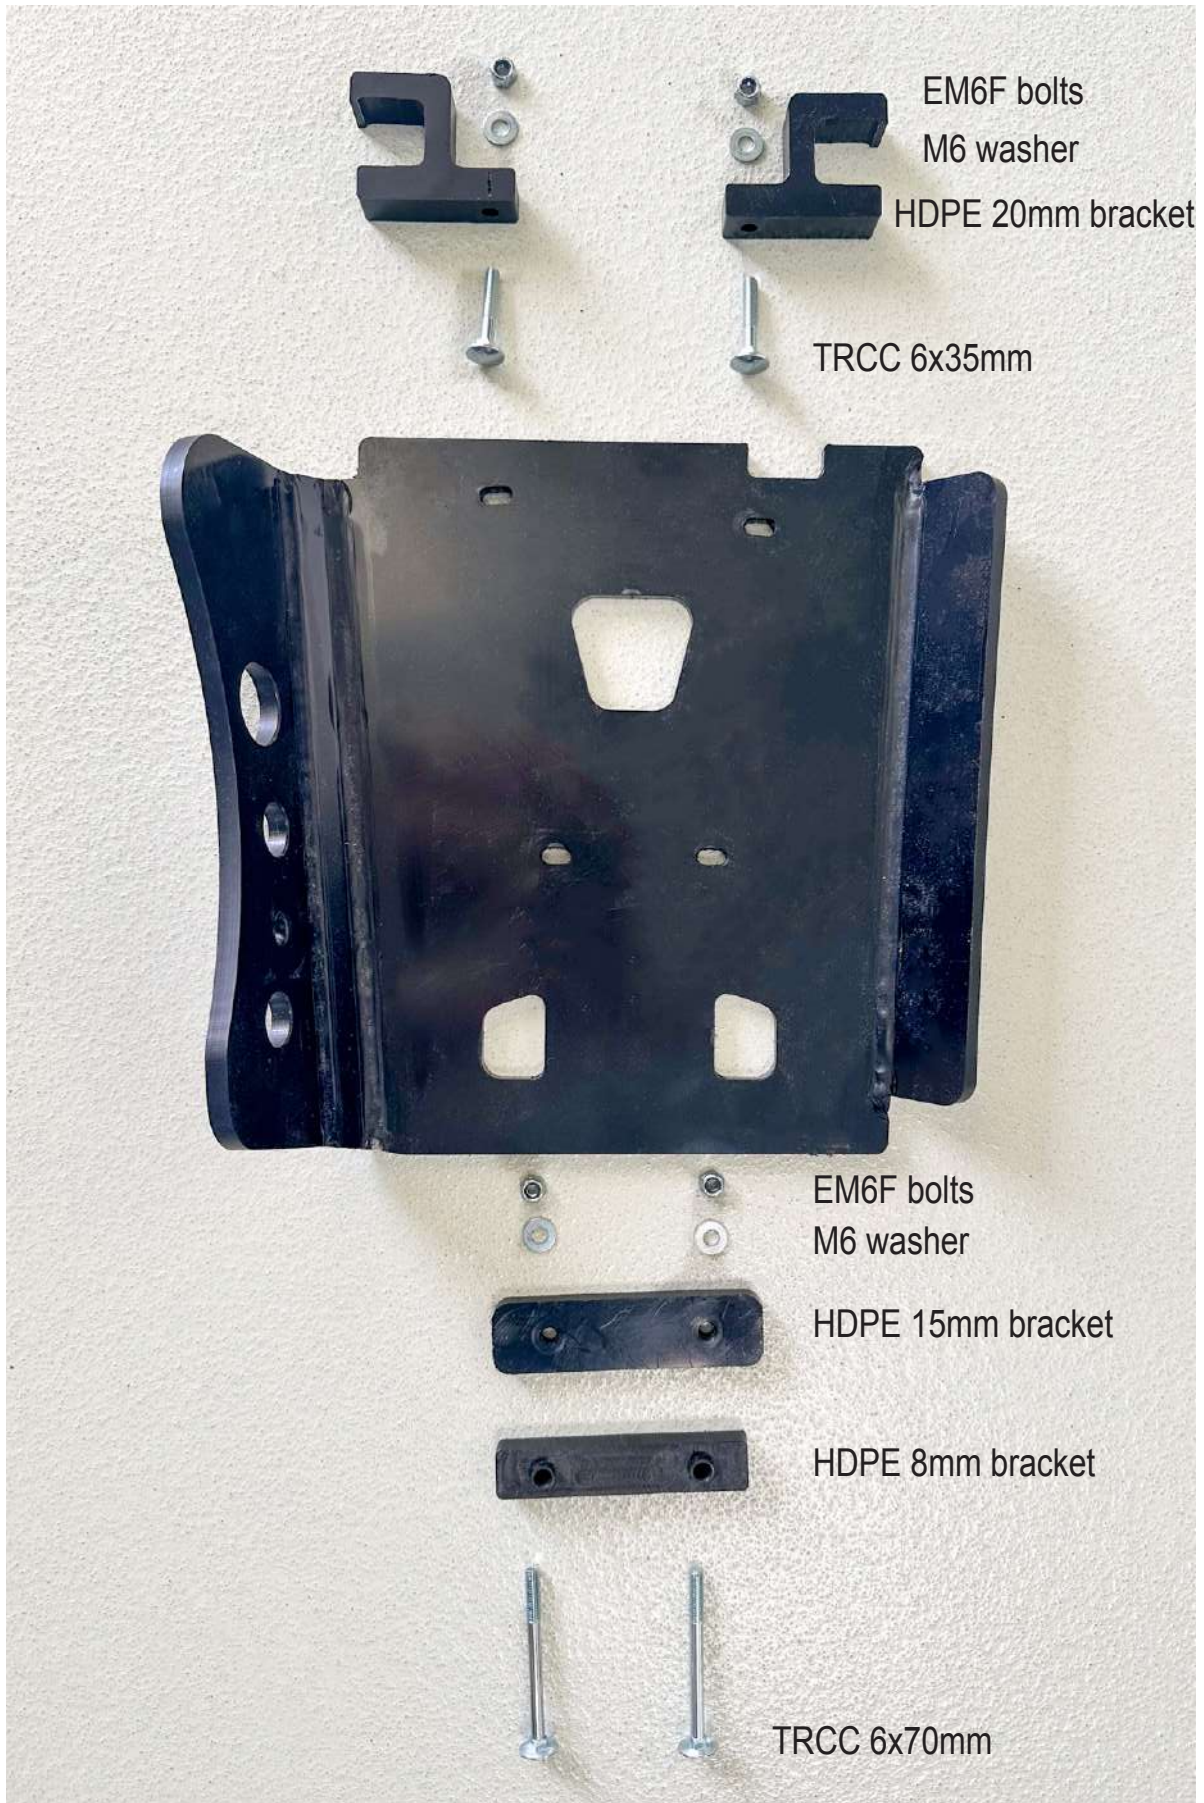

Place all the screws and bolts in the correct spot and watch the tutorial video online to mount the guard on your vehicle.