



# AX1756

## Xtrem skid plate

### Sherco SE250 / SE300 Factory 2-stroke

# Assembling instructions

## What's in the box ?

- 2 NE01-11-001 - THF 6x25mm screws
- 3 NE01-04-002 - Clamped bolts
- 2 NE01-02-002 - TFHC 6x20mm screws
- 1 NE01-02-003 - TFHC 6x25mm screws
- 4 NE01-02-004 - TFHC 6x30mm screws
- 6 NE01-04-003 - EM6F bolts
- 6 NE01-03-001 - M6 washers
- 2 PM01-04-288 - HDPE rear hooks
- 1 NE04-01-273 - Sticker
- 1 PM01-06-085 - Rear plate n°50



The paper instructions may be limitless, scan the QR code to watch the tutorial video online.

This tutorial shows a different skid plate but the mounting is the same.




---


Approximate time of assembly: 15 minutes.

A skid plate is made to protect the vital components of your bike and does not have a « life warranty ». However, production default may happen and we cover it during the first year of use. In case of premature breakage, please write to [contact@axpracing.com](mailto:contact@axpracing.com)


## Follow the steps !

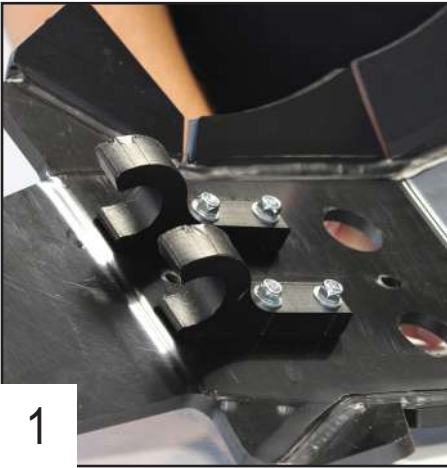

Fix the rear hooks on the skid plate using TFHC 6x30mm screws + washers and bolts and tighten.

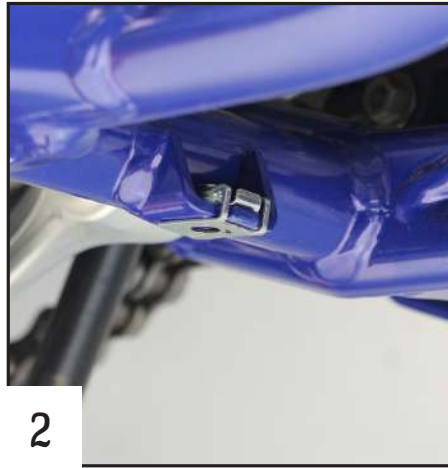


Place one clamped bolt on the rear of the frame, and 2 on the front for the fixation.

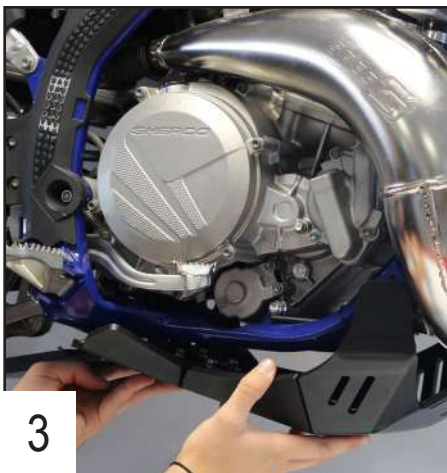


Clip the plate on the frame using the two rear hooks.



Place 2 THF 6x25mm screws in the front holes and tighten.

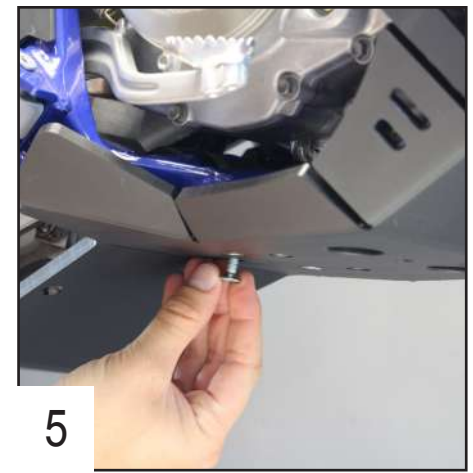


Place a TFHC 6x25mm screw in the rear hole.

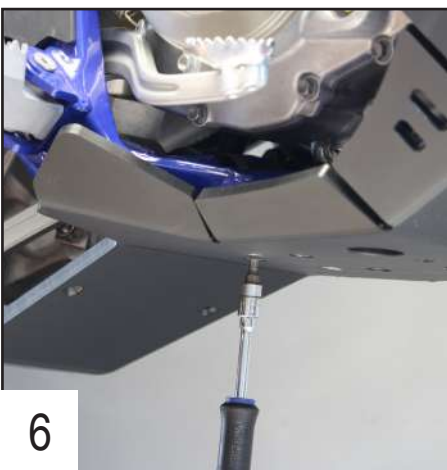

Tighten the screw.



Push down to place the linkage guard.

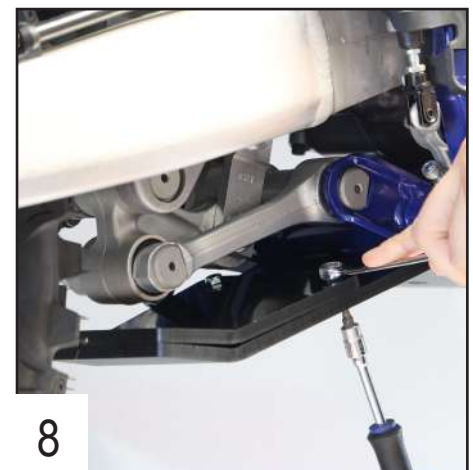

Fix the plate using 2 TFHC 6x20mm screws + M6 washers and bolts.

## **You're all ready to ride !**