



AX1758

Xtrem skid plate
Sherco SEF250 / SEF300
Factory 4-stroke

Assembling instructions

What's in the box ?

- 2 NE01-11-001 - THF 6x25mm screws
- 3 NE01-04-002 - Clamped bolts
- 2 NE01-02-002 - TFHC 6x20mm screws
- 1 NE01-02-003 - TFHC 6x25mm screws
- 4 NE01-02-004 - TFHC 6x30mm screws
- 6 NE01-04-003 - EM6F bolts
- 6 NE01-03-001 - M6 washers
- 2 PM01-04-288 - HDPE rear hooks
- 1 NE04-01-274 - Sticker
- 1 PM01-06-086 - Rear plate n°51



The paper instructions may be limitless, scan the QR code to watch the tutorial video online.


This tutorial shows a different skid plate but the mounting is the same.



Approximate time of assembly: 15 minutes.


A skid plate is made to protect the vital components of your bike and does not have a « life warranty ». However, production default may happen and we cover it during the first year of use. In case of premature breakage, please write to contact@axpracing.com

Follow the steps !

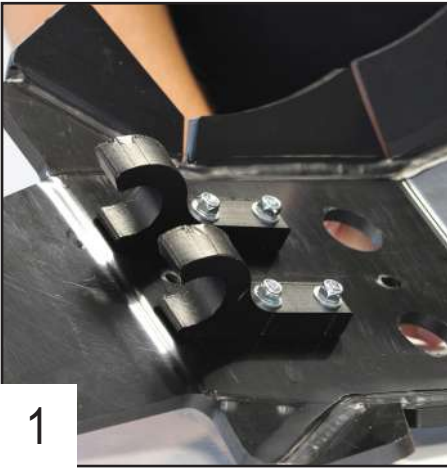


1

Fix the rear hooks on the skid plate using TFHC 6x30mm screws + washers and bolts and tighten.

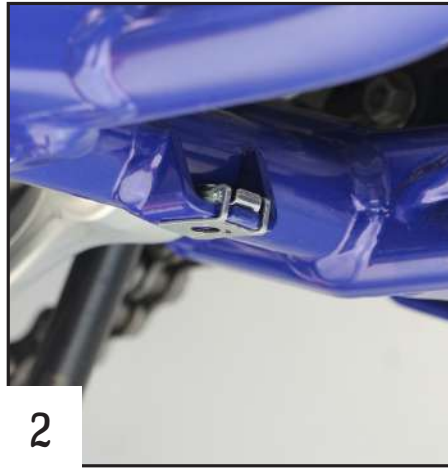


2

Place one clamped bolt on the rear of the frame, and 2 on the front for the fixation.

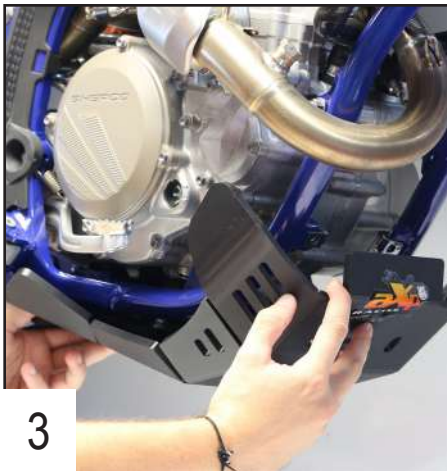


3

Clip the plate on the frame using the two rear hooks.

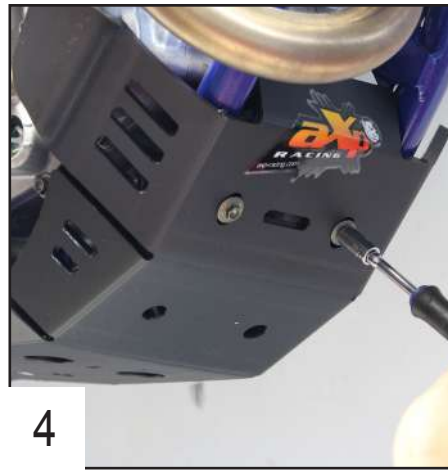


4

Place 2 THF 6x25mm screws in the front holes and tighten.

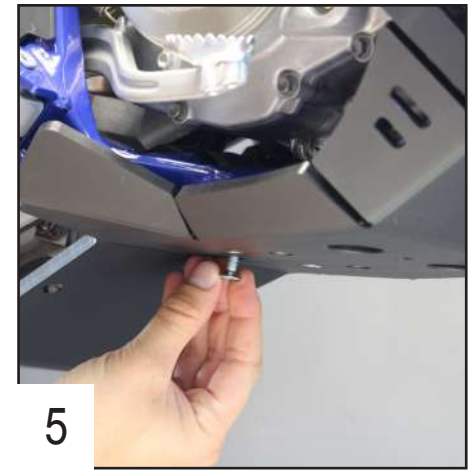

5

Place a TFHC 6x25mm screw in the rear hole.

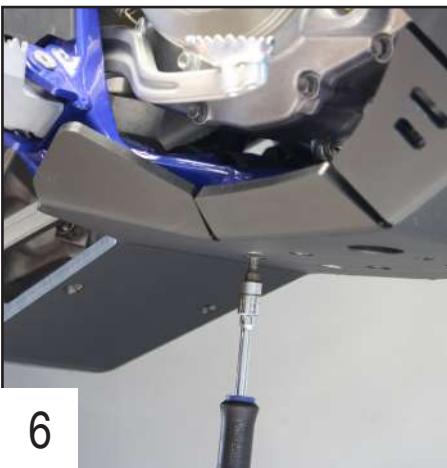


6

Tighten the screw.



7

Push down to place the linkage guard.

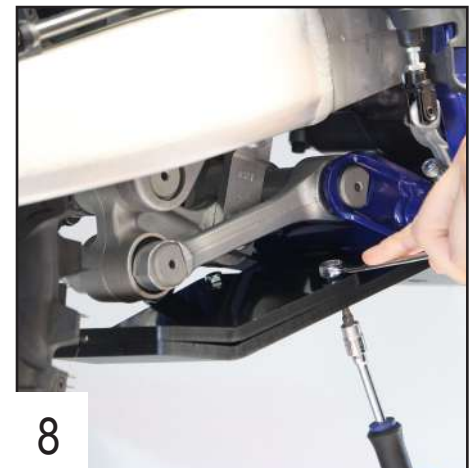

8

Fix the plate using 2 TFHC 6x20mm screws + M6 washers and bolts.

You're all ready to ride !