



AX1774

Linkage guard

CFMoto MT450

Assembling instructions

What's in the box ?

- 2 NE01-04-003 - EM6F bolts
- 2 NE01-03-001 - M6 washers
- 2 NE01-02-002 - TFHC 6x20mm screws
- 1 PM01-06-091 - Linkage guard N°55



The paper instructions may be limitless, a tutorial video is available online to help you.

Scannez le QR code pour regarder la vidéo de montage de la protection de biellette sur votre sabot AXP Racing.



Approximate time of assembly: 5 minutes.


A skid plate is made to protect the vital components of your bike and does not have a « life warranty ». However, production default may happen and we cover it during the first year of use. In case of premature breakage, please write to contact@axpracing.com

Follow the steps !




1

Insert the linkage guard at the rear of the plate.

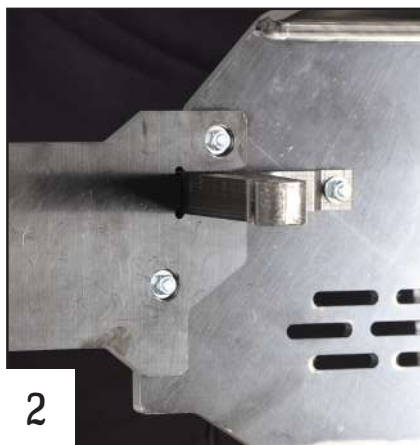

2

Use 2 TFHC 6x20mm screws + M6 washers and bolts to fix the guard.

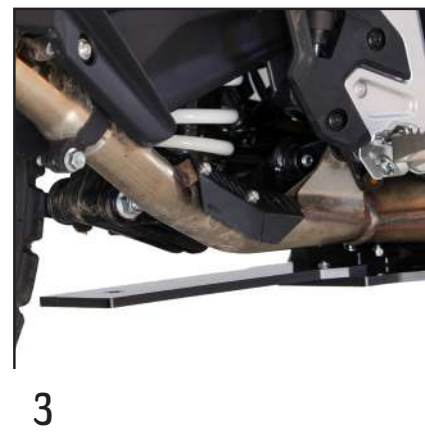

3

You're all ready to go.