



# AX1789

## Skid plate

### Ducati Desmo 450MX

# Assembling instructions

## What's in the box ?

- 1 PM01-11-004 - Front plastic fixation (a)
- 1 NE04-01-308 - Big sticker
- 1 NE04-01-309 - Small sticker
- 2 NE01-11-001 - THF 6x25mm screws
- 2 NE01-02-002 - TFHC 6x20mm screws
- 2 NE01-03-001 - M6 washers
- 2 NE01-04-003 - EM6F bolts



The paper instructions may be limited, a tutorial video is available online to help you.




---

Approximate time of assembly: 5 minutes.

A skid plate is made to protect the vital components of your bike and does not have a « life warranty ». However, production default may happen and we cover it during the first year of use.


In case of premature breakage, please write to [contact@axpracing.com](mailto:contact@axpracing.com)

## Follow the steps

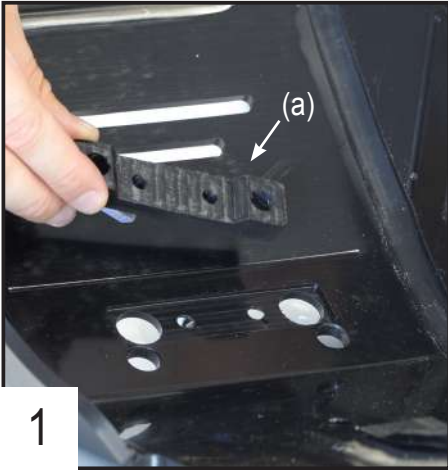

Place the front fixation in the machined side in the skid plate using 2 TFHC 6x20mm screws + M6 washers and bolts.

Placez le support dans la partie usinée à l'avant du sabot en utilisant 2 TFHC 6x20mm + rondelles M6 et écrous.

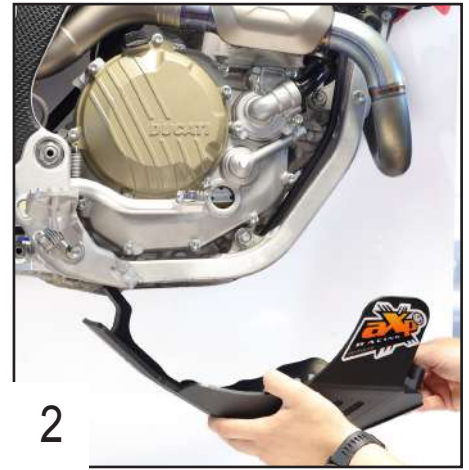

Place the plate under the bike.

Placez le sabot sous la moto.



Clip the rear hook on the frame tube.

Clipsez le crochet arrière sur le tube du cadre.



Then lift the plate to align the front holes.

Relevez le sabot et alignez-le avec les trous avant.



Use 2 THF 6x25mm screws to fix the plate on the bike using the holes on the frame.

Utilisez 2 THF 6x25mm pour fixer le sabot en utilisant les trous existants sur le cadre.



Tighten the screws.

Serrez les vis.

**You're all  
ready to  
ride !**