



AX1802

MX skid plate

Honda CRF450R / RX

Assembling instructions

What's in the box ?

- 1 PM01-05-012 - Front fixation 15mm (a)
- 1 PM01-10-039 - Rear plastic mount 30mm (b)
- 1 PM01-04-315 - Rear hook 20mm (c)
- 1 NE04-01-313 - Big sticker
- 1 NE04-01-314 - Small sticker
- 2 NE01-11-001 - THF M6x25 screws
- 6 NE01-03-001 - M6 washers
- 6 NE01-04-003 - EM6F bolts
- 4 NE01-02-002 - TFHC 6x20mm screws
- 2 NE01-02-003 - TFHC 6x25mm screws



The paper instructions may be limited, scan the QR code to watch the tutorial video online.



Approximate time of assembly: 15 minutes.

Skid plates are made to protect the vital components of your bike and does not have a «life warranty». If you notice a defect on your skid plate at reception, please write to contact@axpracing.com


Off-road riding involves significant stresses and risks of impact on the motorcycle and its components. AXP Racing products are designed to improve protection and durability; however, they cannot be considered a foolproof guarantee against damage. AXP Racing accepts no liability for damage resulting from use, impact, or misuse.

Follow the steps




Put the front fixation in position, the flat face must be against the plate.

Placez la fixation avant, la partie plate contre le sabot.

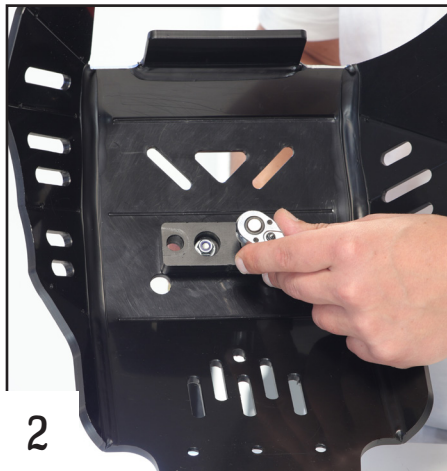


Use 2 TFHC 6x20mm screws and M6 washers and bolts and tighten.

Fixez la avec 2 vis TFHC 6x20mm + rondelles et écrous et serrez.

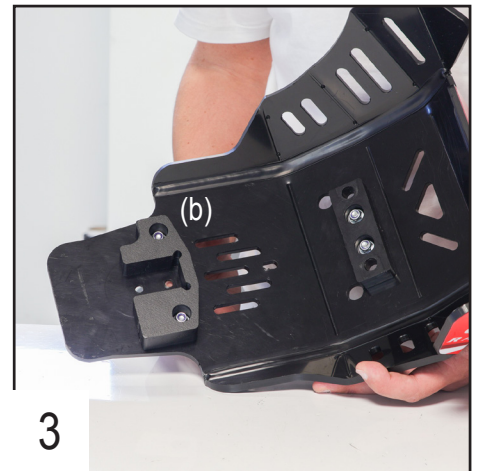


Place the 30mm thick plastic block at the rear. The flat face must be against the plate. Use 2 TFHC 6x20mm screws + M6 washers and bolts, do not tighten.

Placez le bloc plastique, la face plate contre le sabot. Utilisez 2 vis TFHC 6x20mm + rondelles et écrous, sans serrer.

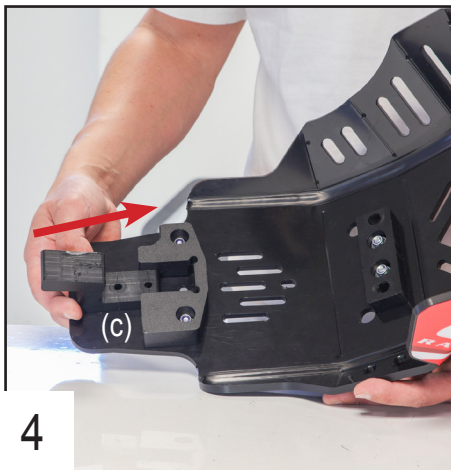


Slide the hook in the plastic block.

Glissez le crochet dans le bloc plastique.

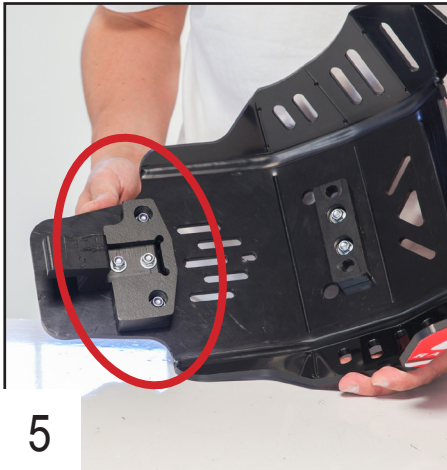

Fix it with 2 TFHC 6x25mm screws + 6 washers and bolts, then tighten the 4 screws.

Fixez le avec 2 vis TFHC 6x25mm + rondelles et écrous puis serrez les 4 vis.

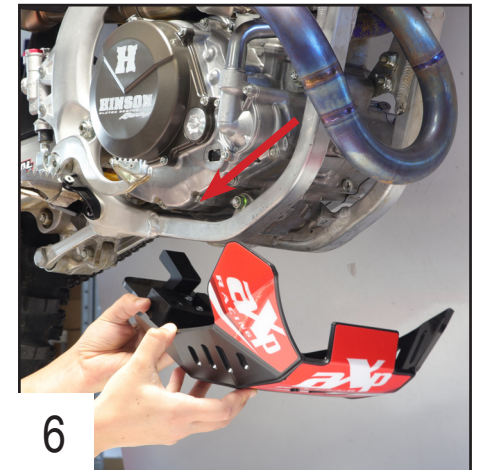

Clip the plate on the frame.

Clipsez le sabot sur la barre centrale du cadre.




Then, lift the plate.

Puis, remontez le sabot contre la moto.



Place 2 THF 6x25mm screws in the front holes.

Placez 2 vis THF 6x25mm dans les trous à l'avant.

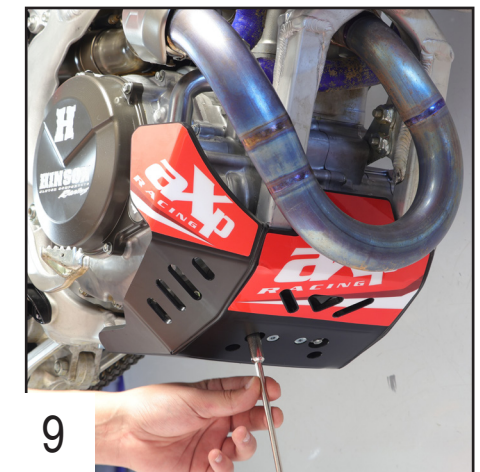

Tighten the screws.

Serrez les vis.

You're all ready to ride !