


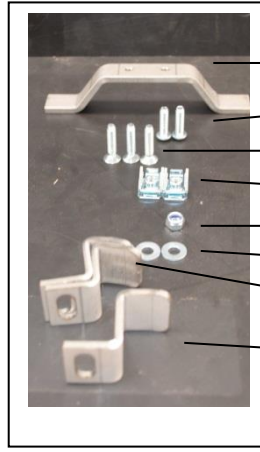


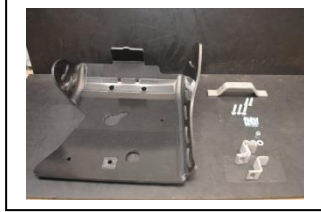

REFERENCE: AX 6085
GASGAS 250 00-08

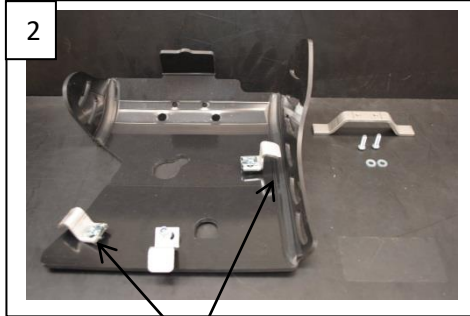



- 1 PM02-07-012
- 2 NE01-01-009
- 3 NE01-02-003
- 4 NE01-04-002
- 1 NE01-04-003
- 3 NE01-03-001
- 2 NE07-02-008
- 1 NE07-02-001
- 1 NE04-01-009

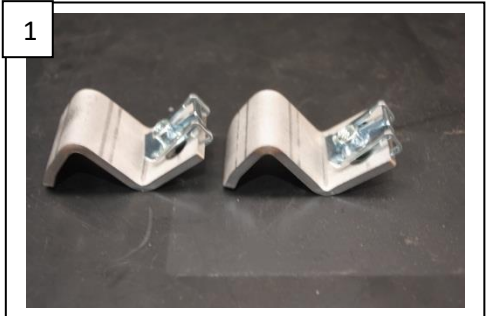


3
Place the mounting flange between frame and cases.
Install the skid plate on the motorbike.



REFERENCE: AX6085
GAS GAS 250 00-08

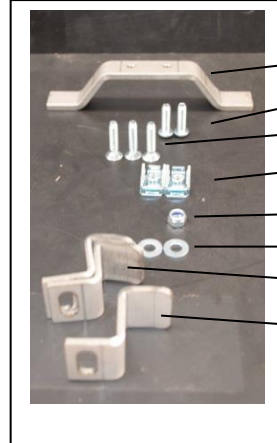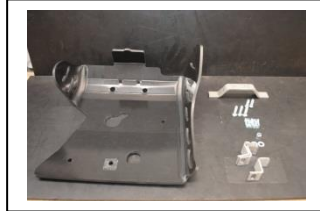

- 1 PM02-07-012
- 2 NE01-01-009
- 3 NE01-02-003
- 4 NE01-04-002
- 1 NE01-04-003
- 3 NE01-03-001
- 2 NE07-02-008
- 1 NE07-02-001
- 1 NE04-01-009

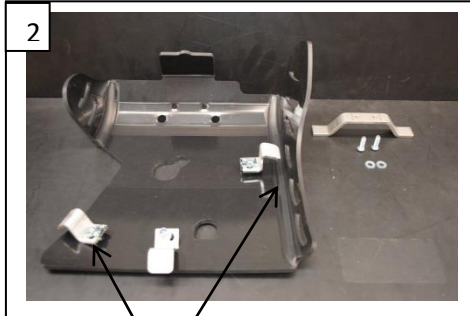

3
Place the mounting flange between frame and cases.
Install the skid plate on the motorbike.

