


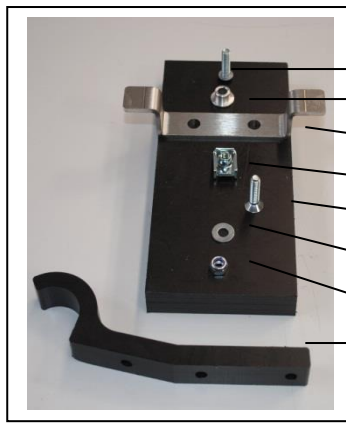
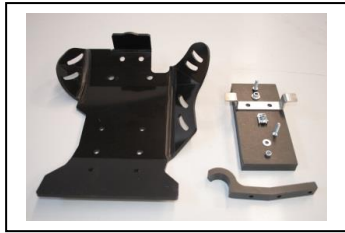


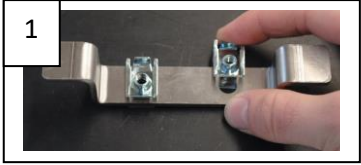

REFERENCE: AX1177
KTM 250-300EXC

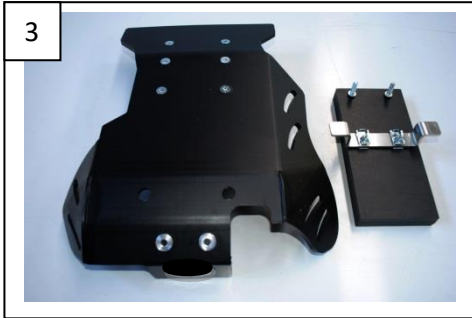

- 2 NE01-11-001
- 1 PM02-01-027
- 2 NE01-04-002
- 6 NE01-02-003
- 6 NE01-03-001
- 6 NE01-04-003
- 2 PM 01-04-071
- 1 NE04-01-011



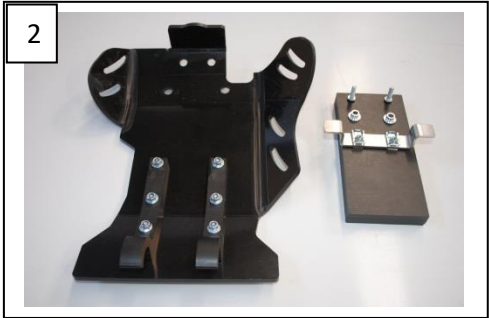


4


Place the mounting flange between frame and cases.
Install the skid plate on the motorbike.



REFERENCE: AX1177
KTM 250-300EXC

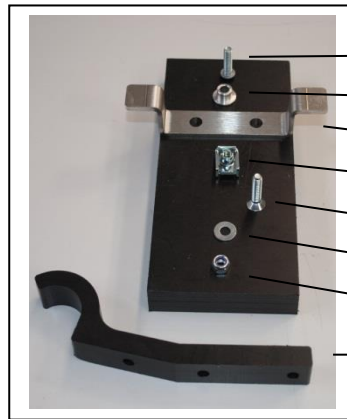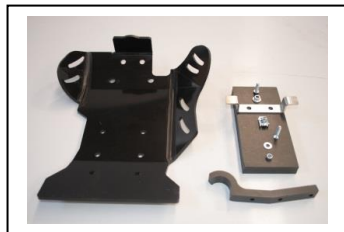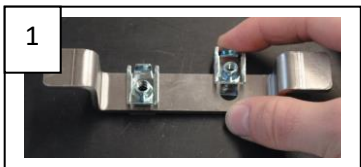

- 2 NE01-11-001
- 1 PM02-01-027
- 2 NE01-04-002
- 6 NE01-02-003
- 6 NE01-03-001
- 6 NE01-04-003
- 2 PM 01-04-071
- 1 NE04-01-011

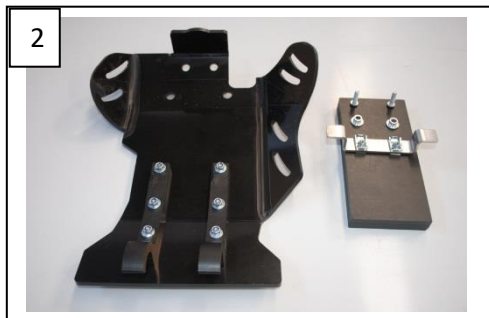

4

Place the mounting flange between frame and cases.
Install the skid plate on the motorbike.