



AX1311


Beta 250RR/300RR
Radiator Guards

- | | |
|---------------|------------------------|
| 2 NE01-02-001 | TFHC 6X16 |
| 2 NE01-01-008 | TBHC 6X25 |
| 6 NE01-03-001 | RONDELLES M6 |
| 7 NE01-01-001 | TBHC 6X16 |
| 1 NE01-01-011 | TBHC 6X35 |
| 1 NE05-01-001 | ENTRETOISE PLAST. 15mm |
| 2 NE01-01-012 | TBHC 6X12 |
| 1 PM03-04-076 | ALU PART. |
| 4 PM03-02-011 | |
| 1 PM03-01-009 | ENTRETOISE ALU 54mm |




1

Preparer la moto comme ci-dessus
Prepare your bike like it

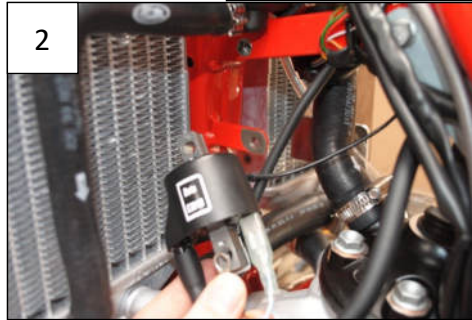


2

Enlever ces 2 vis
Get down this 2 screws

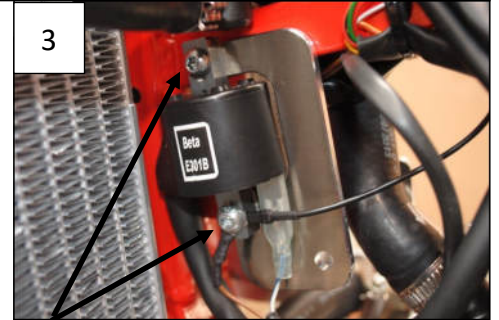


3

Fixer la pièce Alu avec les Tbhc 6x25mm
Fix the ALU part with Tbhc 6x25mm

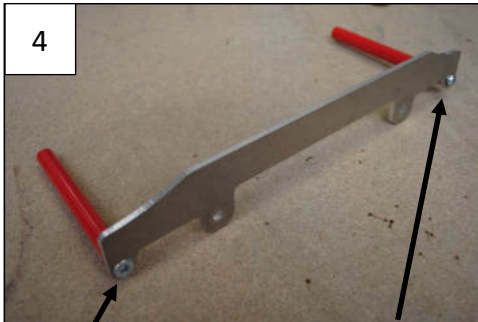

4

1 Tfhc 6x16 mm 1 Tbhc 6x16mm

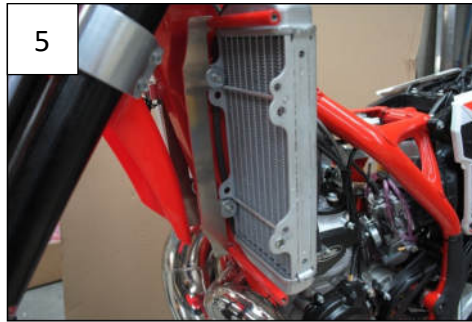

5

Vis d'origine / *Original screws*



6

2 Tbhc 6x16mm



7

1 Tbhc 6x35mm + 1 rondM6 + entretoise plast 15mm (*Plastic spacer 15mm*) + entretoise alu 54mm (*Alu spacer 54mm*)



8

Faire comme « 1 » puis Vis d'origine / Do like « 1 » then *Original screws*




9

1 Tbhc 6x16mm + 1 Rond M6



10

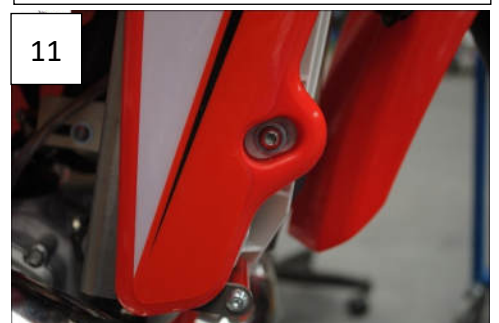

11

1 Tbhc 6x12 + 1 Rond M6