



- 1 NE10-01-005 - Threaded ring
- 1 NE10-01-006 - Alloy spacer
- 3 NE01-04-003 - Em6f
- 3 NE01-03-001 - M6 Washers
- 3 NE01-02-009 - Tfhc 6x55mm



### AX1618

Orange Chain guide  
KTM



[www.axp-racing.com](http://www.axp-racing.com)

### TUTORIAL VIDEO :

Scan with your iPhone Camera OR  
Use «QR Code Reader» app' for Android's




**Remove the OEM chain guide**  
Enlever le guide chaîne d'origine



**Place the alloy smooth spacer as indicated on the pictures**  
Placer l'entretoise lisse comme indiqué sur les photos



**Place the threaded ring as indicated on the pictures**  
Placer la bague taraudée comme indiqué sur les photos

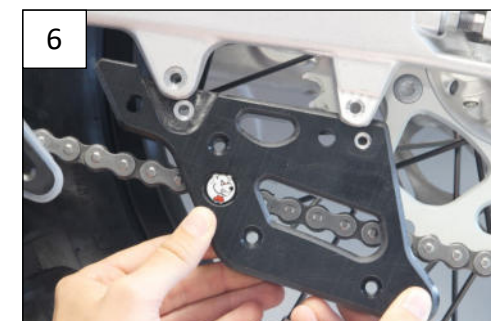

**Use OEM screws**  
Utiliser les vis d'origine



**Place the second bloc, clip it and tight with the Tfhc 6x55mm screws, M6 Washers and em6f**  
Placer le second bloc, clipser et serrer le tout avec les tfhc 6x55 + Rondelles M6 et les Em6f

