




- 2 NE01-11-001 - Front screws
- 2 NE01-04-002 - Calmped bolts
- 2 NE01-02-002 - Tfhc 6x20mm
- 1 NE01-02-003 - Tfhc 6x25mm
- 1 NE01-02-004 - Tfhc 6x30mm
- 2 NE01-03-001 - M6 Washers
- 2 NE01-04-003 - Em6f
- 1 PM01-04-233 - Rear mount
- 1 PM01-04-234 - Front mount
- 1 PM01-04-237 - Large block
- 1 NE04-01-224 - Sticker



AX1670

Blue Skid Plate 6mm
HVA TC125

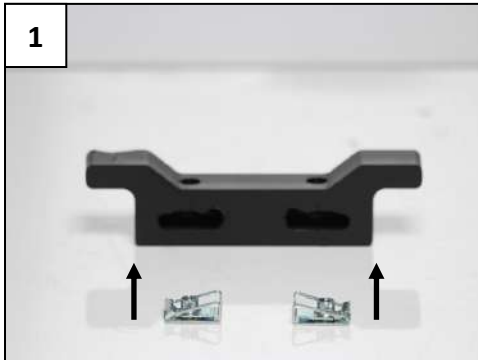

Remove the OEM plastic
Retirer le cache plastique



Fit by autodrilling with the 2 Tfhc 6x20mm
Fixer par auto perçages avec les 2 Tfhc 6x20mm



1 Tfhc 6x25mm
1 M6 Washer
1 Em6f

1 Tfhc 6x30mm
1 M6 Washer
1 Em6f



Move it to the top until it's blocked
Faire remonter la bride jusqu'à ce qu'elle soit bloquée

