



AX1718

Radiator guards

Yamaha YZ450F/YZ450FX

Assembling instructions

What's in the box ?

- 4 NE01-01-001 - TBHC 6x16mm screws
- 2 NE01-01-009 - TBHC 6x20mm screws
- 2 NE01-01-011- TBHC 6x35mm screws
- 2 NE01-04-003 - EM6F bolts
- 10 NE01-03-001 - M6 washers



The paper instructions may be limitless, scan the QR code to watch the tutorial video online.




Approximate time of assembly: 15 minutes.

Radiator guards are made to protect the vital components of your bike and does not have a « life warranty ». If you notice a defect on your radiator guards at reception, please write to contact@axpracing.com

Follow the steps




Remove the plastic protections on both sides.

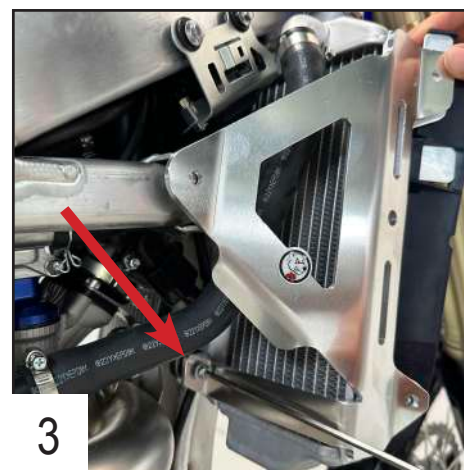

Place the aluminium guard on the radiator using the TBHC 6x35mm screw + M6 washer.



For a better fixation, you can drill a hole in the radiator and plastic.

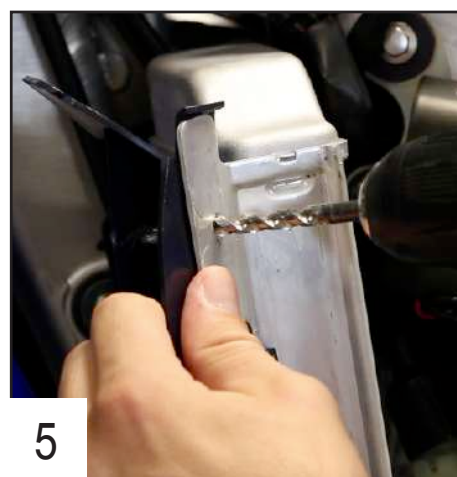

Use a 6,5mm bit drill and place the TBHC 6x16mm screw + EM6F bolt and washer.



Place the plastic protection back in place.



Place the TBHC 6x20mm screw + M6 washer in the bottom hole.



Place the TBHC 6x16mm screw + washer in the last hole.



Place the OEM screw to finish fixing the plastic. Repeat the operation on the other side.

You're all ready to ride !