



AX1780

Adventure skid plate

Kove 800 X Rally / 800 X Pro

What's in the box ?

- 1 PM03-04-147 - Alloy front fixation
- 1 PM01-10-036 - HDPE front support
- 2 PM01-10-037 - HDPE rear blocks 30mm
- 12 NE01-03-001 - M6 washers
- 10 NE01-04-003 - EM6F bolts
- 2 NE01-04-002 - Clamped bolts
- 8 NE01-02-003 - TFHC 6x25mm screws
- 2 NE01-01-009 - TBHC 6x20mm screws
- 2 NE01-11-001 - THF 6x25mm screws
- 2 NE01-06-028 - TH 6x35mm screws
- 2 NE01-03-006 - M6 large washers
- 1 NE04-01-324 - Sticker



The paper instructions may be limited, scan the QR code to watch the tutorial video online.

Approximate time of assembly: 30 minutes.


In case of premature breakage, please write to contact@axpracing.com

Assembling instructions

A skid plate is made to protect the vital components of your bike and does not have a «life warranty». However, production default may happen and we cover it during the first year of use.

Off-road riding involves significant stress and risk of impact on the motorcycle and its components. AXP Racing products are designed to improve protection and durability; however, they cannot be considered a foolproof guarantee against damage. AXP Racing accepts no responsibility for damage resulting from use, impact, or misuse.


Follow the steps

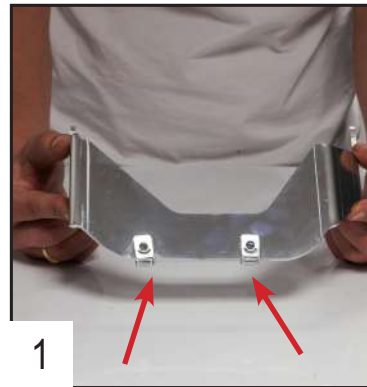

1

Insert the clamped bolts in the front fixation.


Insérez les écrous-pinces dans la fixation avant.

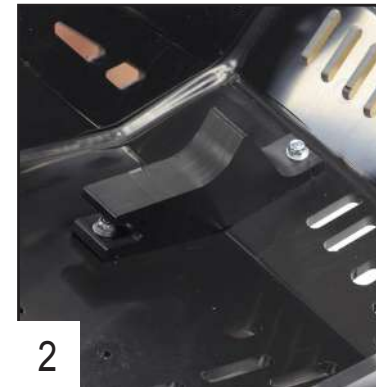

2

Place 2 TFHC 6x25mm screws + M6 washers and bolts to fix the front plastic fixation.

Placez 2 + rondelles et écrous pour fixer le bloc plastique à l'avant.

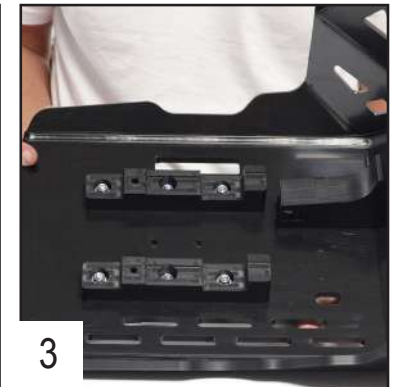

3

Place the rear fixations using 6x25mm screws + M6 washers and bolts.


Placez les fixations arrières avec 6 vis + rondelles et écrous.




4

Unclip the cable from the aluminum fixation then unplug the horn.

Declipsez le cable de la patte de fixation en alu puis débranchez le klaxon.

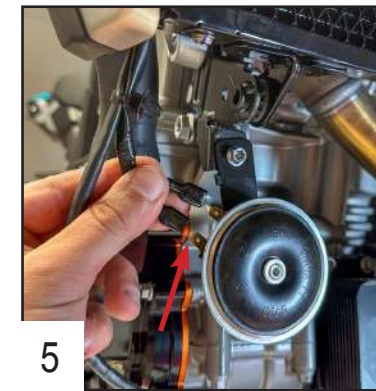

5

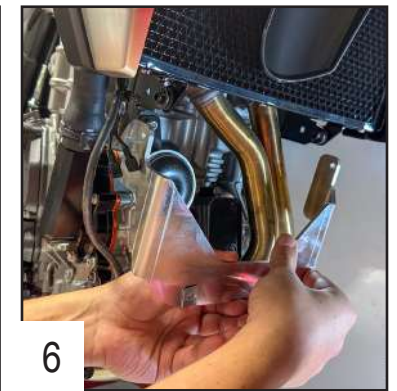

6

Place the front alu fixation under the bike.

Placez la fixation en alu à l'avant de la moto.



7

Place one TBHC 6x20mm screw on the right side + M6 washer and bolt. Do not tighten


Placez une vis + rondelle et écrou à droite, sans serrer.



8

Place one TBHC 6x20mm screw on the left side + M6 washer and bolt and tighten.

Placez une vis + rondelle et écrou à gauche, puis serrez.

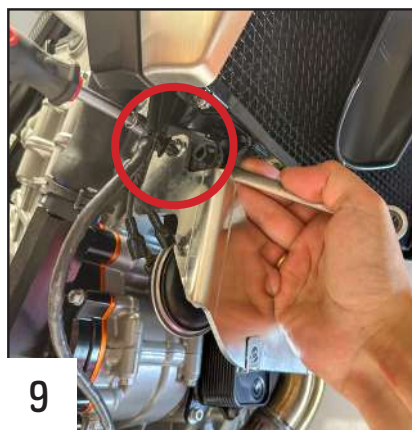

9

Tighten the right screw.

Serrez la vis à droite.



10

Reconnect the horn.


Rebranchez le klaxon.



11

Place the plate under the bike.


Placez le sabot sous la moto.

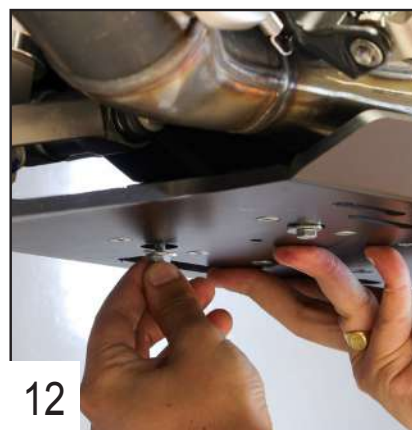

12

Place 2 TH 6x35mm screws + M6 large washers in the holes under the plate.

Placez 2 TH 6x35mm + rondelles larges dans les trous de fixation à l'avant.

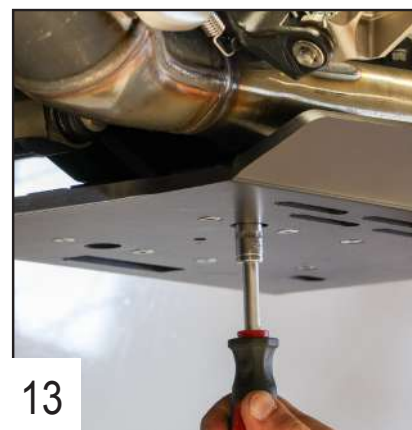

13

Tighten the screws.

Serrez les vis.



14

Place 2 THF 6x25mm screws in the front holes.

Placez 2 THF 6x25mm dans les trous à l'avant.



15

Tighten the screws.

Serrez les vis.

**You're all
ready to
ride !**