



AX1787

Chain guide

Ducati Desmo 450MX

Assembling instructions

What's in the box ?

- 1 NE01-06-004 - TH 6x60mm screw
- 1 NE01-06-010 - TH 6x15mm screw
- 3 NE01-04-003 - EM6F bolts
- 2 NE01-02-013 - TFHC 6x60mm screws
- 1 NE10-01-014 - Threaded spacer 6x10mm
- 3 NE01-04-003 - M6 washers
- 2 NE10-01-004 - Shouldered alloy rings



The paper instructions may be limited, scan the QR code to watch the tutorial video online.


Approximate time of assembly: 15 minutes



Chain guards are made to protect the vital components of your bike and does not have a «life warranty». If you notice a defect on your chain guards at reception, please write to contact@axpracing.com

Off-road riding involves significant stresses and risks of impact on the motorcycle and its components. AXP Racing products are designed to improve protection and durability; however, they cannot be considered a foolproof guarantee against damage. AXP Racing accepts no liability for damage resulting from use, impact, or misuse.


Follow the steps

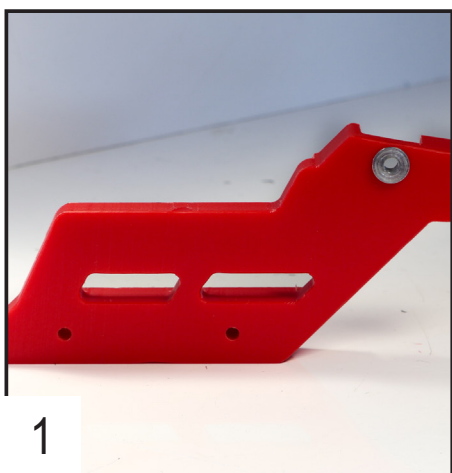

1

Place the alloy spacer in the hole of the smallest part.


Placez une entretoise sur l'extérieur de la petite partie.

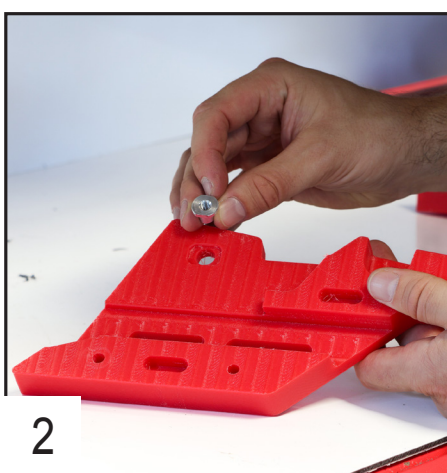


2

Place the threaded spacer with straight lines on the inside of the biggest part.

Placez l'entretoise avec les deux côtés droits à l'intérieur de la grande partie.

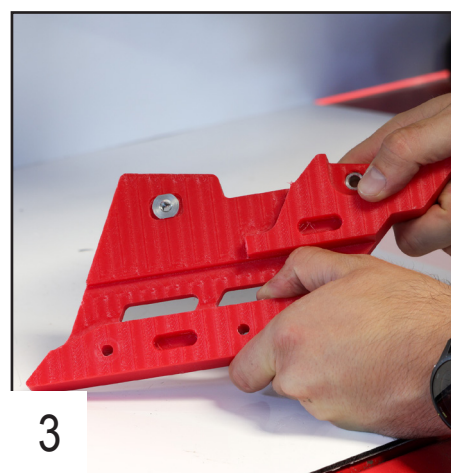


3

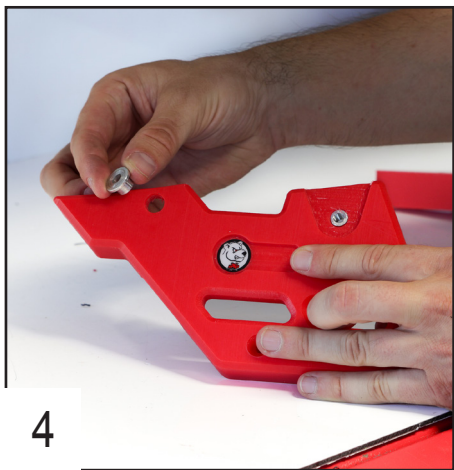


4

Place the alloy spacer in the outside hole of the biggest part.
Placez une entretoise sur l'extérieur de la plus grande partie.

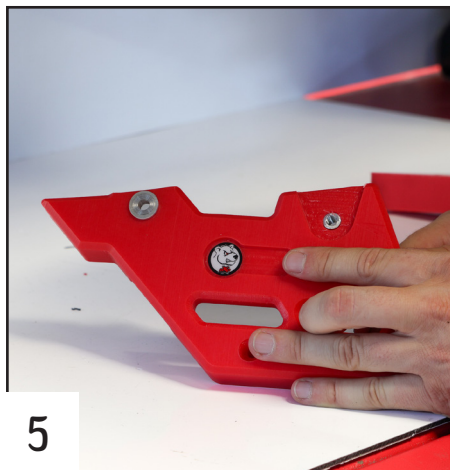

5

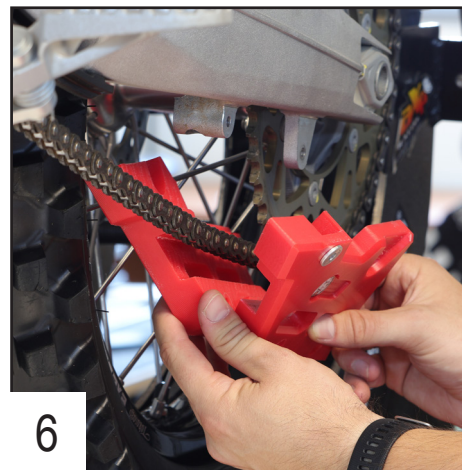

6


Clip the two plastic parts together.
Clipser les deux blocs ensemble.



7

Place a TH 6x15mm screw in the top rear hole.


Fixez le guide chaîne en utilisant une TH 6x15mm dans le trou supérieur à l'arrière.

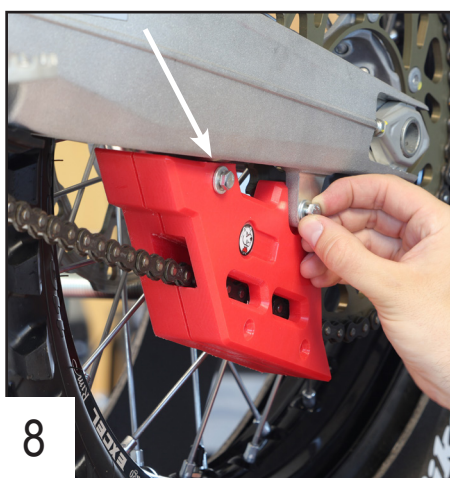

8

Place a TH 6x60mm screw in the top front hole with a bolt.


Placez une TH 6x60mm et un écrou pour la fixation à l'avant.

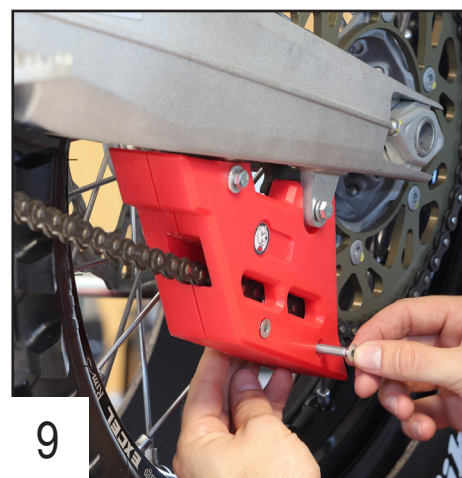

9


Place 2 TFHC 6x60mm screws + M6 washers and bolts in the bottom holes.

Placez 2 TFHC 6x60mm + rondelles et écrous dans les trous inférieurs.

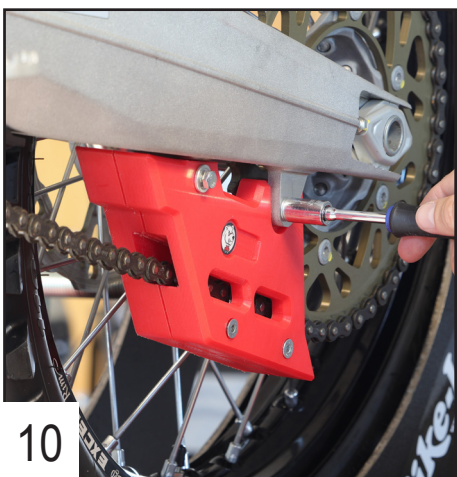


10

Tighten the top rear screw.
Serrez la vis prise sur le bras oscillant en premier.

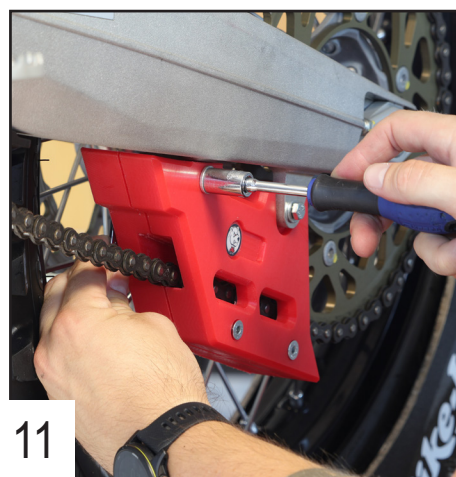

11

Tighten the front screw.
Serrez la vis avant.

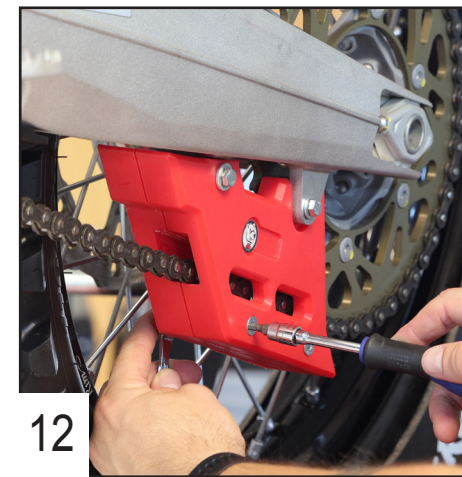

12

Tighten the bottom screws.
Serrez les vis du bas.