



AX1800 Chain guide

KTM 390 Adventure R / Enduro R

Assembling instructions

What's in the box ?

- 3 NE01-02-013 - TFHC 6x60mm screws
- 3 NE01-03-001 - M6 washers
- 3 NE01-04-003 - EM6F bolts
- 1 NE10-01-005 - Alloy shouldered ring
- 1 NE10-01-006 - Alloy spacer



The paper instructions may be limited, scan the QR code to watch the tutorial video online.

Approximate time of assembly: 15 minutes.



Chain guards are made to protect the vital components of your bike and does not have a «life warranty». If you notice a defect on your chain guard at reception, please write to contact@axpracing.com


Off-road riding involves significant stresses and risks of impact on the motorcycle and its components. AXP Racing products are designed to improve protection and durability; however, they cannot be considered a foolproof guarantee against damage. AXP Racing accepts no liability for damage resulting from use, impact, or misuse.

Follow the steps




Place the alloy spacer in the top hole of the bigger part.

Placez une entretoise dans le trou supérieur du bloc principal.

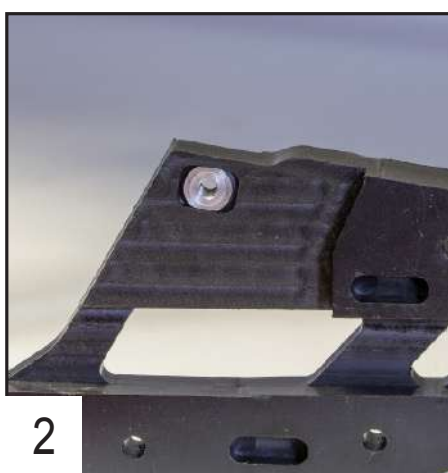

Place the alloy spacer with straight lines on the inside of the smallest part.

Placez l'entretoise avec les deux côtés droits à l'intérieur de la petite partie.

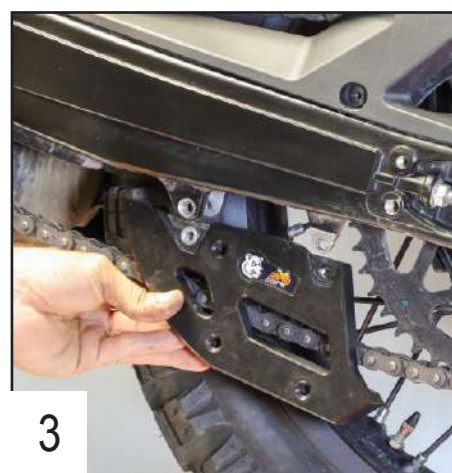

Place the bigger part first.

Placez le gros bloc en premier.



4

Use the OEM screw + M6 washer and bolt in the front hole to keep the guide in place.


Utilisez la vis d'origine + une rondelle et un écrou pour maintenir le guide chaîne en place.



5

Use the OEM screw in the rear hole.

Utilisez la vis d'origine pour fixer la partie arrière.

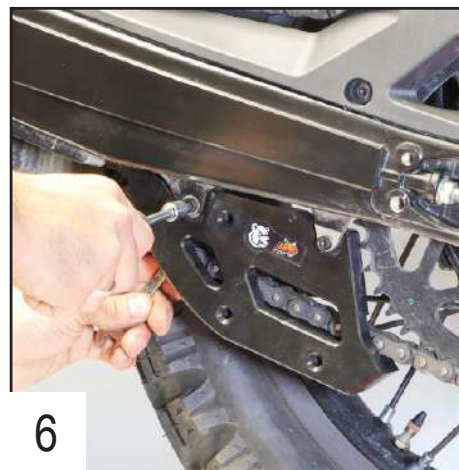

6

Tighten the front screw.


Serrez la vis avant.



7

Tighten the rear screw.

Serrez la vis arrière.

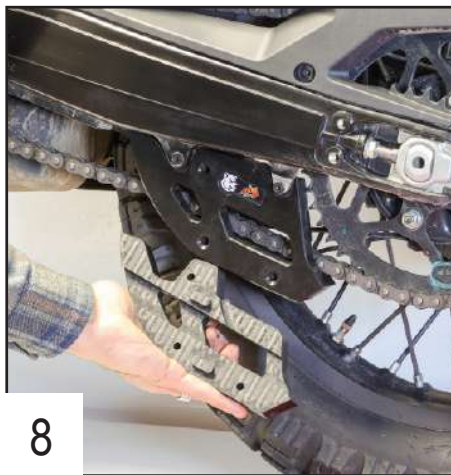

8

Clip the second part on the other side of the chain.


Clipsez la seconde partie de l'autre côté de la chaîne.



9

Placez 3 TFHC 6x60mm screws + M6 washers and bolts to keep the 2 parts together.

Placez 3 vis TFHC 6x60mm + rondelles et écrous pour fixer les deux parties ensemble.

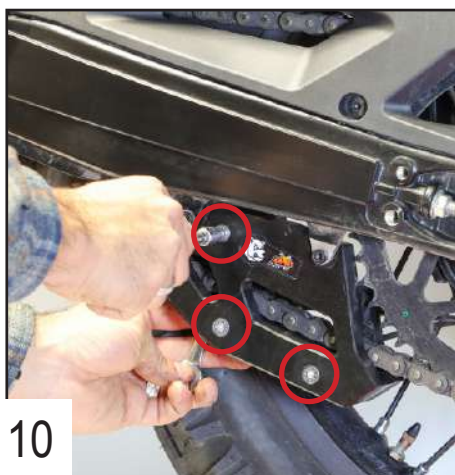

10

Tighten all 3 screws.

Serrez les 3 vis.

**You're
all ready
to ride !**