



AX1811 Side racks

KTM 390 Adventure R / Enduro R

Assembling instructions

What's in the box ?

- 1 PM01-06-100 - HDPE left side plate
- 1 PM01-06-101 - HDPE right side plate
- 4 NE10-01-012 - Alloy spacer 16x6,5x20
- 4 NE10-01-013 - Alloy spacer 16x6,5x10
- 4 NE01-02-008 - TFHC 6x50mm screws
- 4 NE01-02-013 - TFHC 6x60mm screws
- 8 NE01-03-001 - M6 washers
- 8 NE01-04-003 - EM6F bolts



The paper instructions may be limited, scan the QR code to watch the tutorial video online.

Approximate time of assembly: 15 minutes.



Note: this reference can only be fitted on the rear rack AX1799.

Side racks do not have a « life warranty ». However, production default may happen and we cover it during the first year of use.

In case of premature breakage, please write to contact@axpracing.com

Off-road riding involves significant stresses and risks of impact on the motorcycle and its components. AXP Racing products are designed to improve protection and durability; however, they cannot be considered a foolproof guarantee against damage. AXP Racing accepts no liability for damage resulting from use, impact, or misuse.



1

Place the side plate in front of the rack and align the fixation holes.

Placez le support latéral sur le côté du porte bagage et alignez les trous de fixation.



2

Use a TFHC 6x50mm screw + a 10mm spacer in the top hole.

Utilisez une vis + une entretoise de 10mm dans le trou supérieur.



3

Fix the screw with a M6 washer and bolt without tightening.


Fixez la vis avec une rondelle et un écrou, sans serrer.



4

Place the other TFHC 6x50mm screw + spacer in the second hole + M6 washer and bolt.

Placez l'autre vis dans le second trou de fixation avec une rondelle et un écrou.

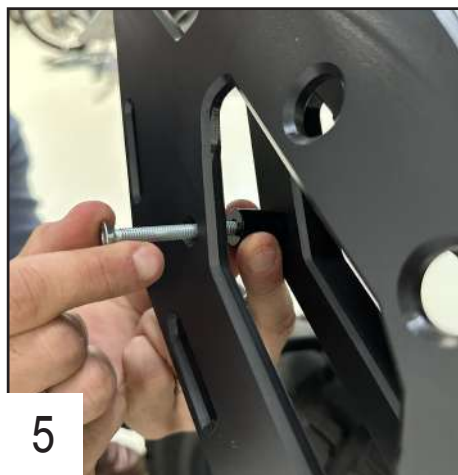

5

Use a TFHC 6x60mm screw + a 20mm spacer in the bottom hole with a M6 washer and bolt.


Utilisez une vis et une entretoise de 20mm dans le trou du bas avec une rondelle et un écrou.



6

Place the second screw, a 20mm spacer + M6 washer and bolt in the other hole.

Placez la seconde vis et l'entretoise de 10mm + rondelle et écrou dans l'autre trou de fixation.

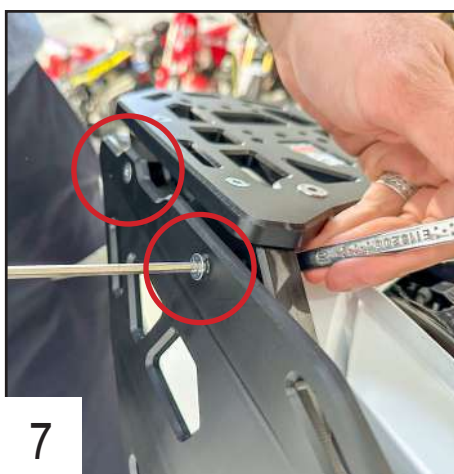

7

Tighten the top screws.


Serrez les vis supérieures.



8

Tighten the bottom screws.

Serrez les vis inférieures.

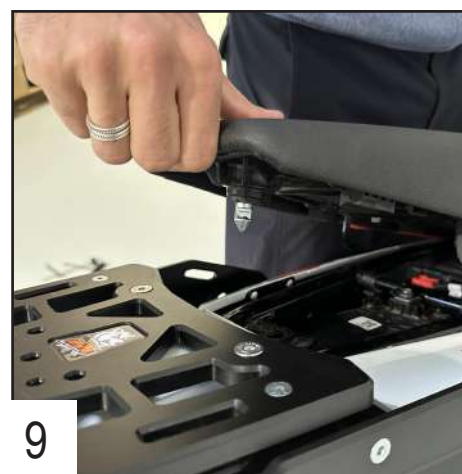

9

Repeat the operation on the other side then put the seat back.

Répétez l'opération de l'autre côté puis remettez la selle.