



AX1814

Chain guide

Beta Xtrainer

Assembling instructions

What's in the box ?

- 2 NE01-02-009 - TFHC 6x55mm screws
- 1 NE01-06-010 - TH 6x15mm screw
- 3 NE01-03-001 - EM6F bolts
- 2 NE01-04-003 - M6 washers
- 1 NE10-01-004 - Shouldered alloy ring
- 1 NE10-01-006 - Alloy spacer



The paper instructions may be limited, scan the QR code to watch the tutorial video online.


Approximate time of assembly: 15 minutes



Chain guards are made to protect the vital components of your bike and does not have a «life warranty». If you notice a defect on your chain guards at reception, please write to contact@axpracing.com

Off-road riding involves significant stresses and risks of impact on the motorcycle and its components. AXP Racing products are designed to improve protection and durability; however, they cannot be considered a foolproof guarantee against damage. AXP Racing accepts no liability for damage resulting from use, impact, or misuse.

Follow the steps

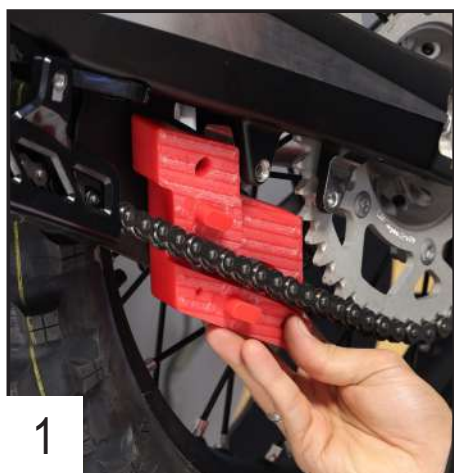

1

Place the smaller part behind the chain.


Placez la petite partie derrière la chaîne.



2

Clip the second part on the other side of the chain.


Placez la deuxième partie de l'autre côté de la chaîne et clipsez.

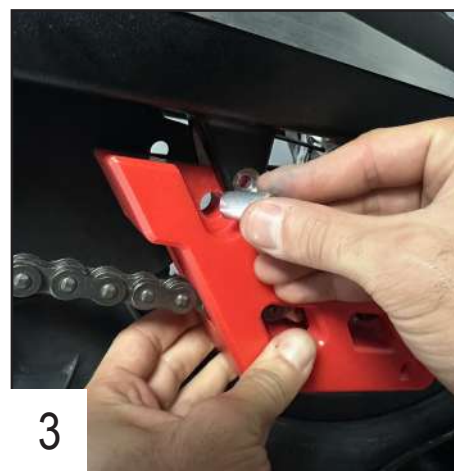

3

Place the alloy spacer in the front hole.


Placez l'entretoise dans le trou à l'avant.

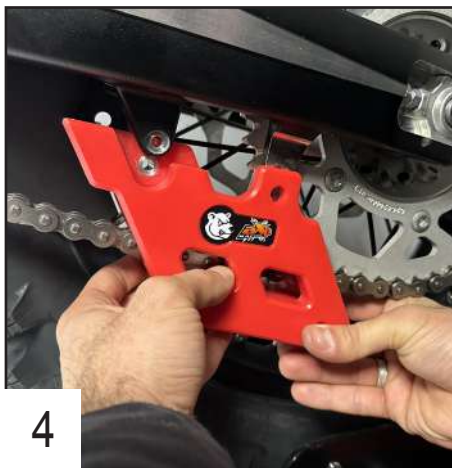

4

Slide the guide back and align the holes.


Glissez le guide chaîne vers l'arrière et alignez les trous.

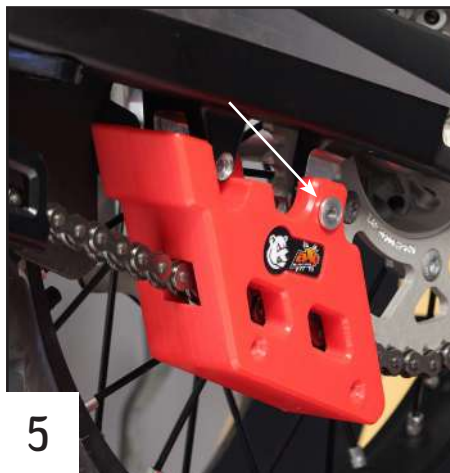

5

Place the alloy ring in the rear hole.


Placez l'entretoise dans le trou à l'arrière.

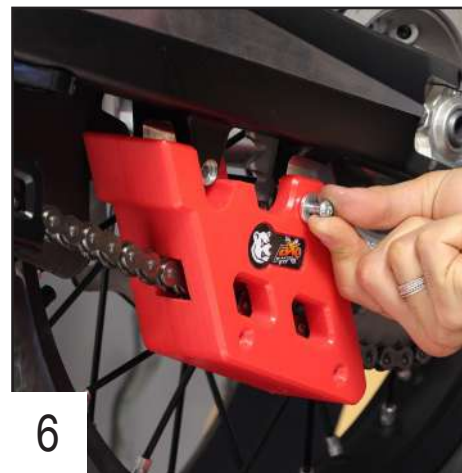

6

Use a TH 6x15mm screw to maintain the guide, do not tighten.


Utilisez la TH pour maintenir le guide chaîne, sans serrer.

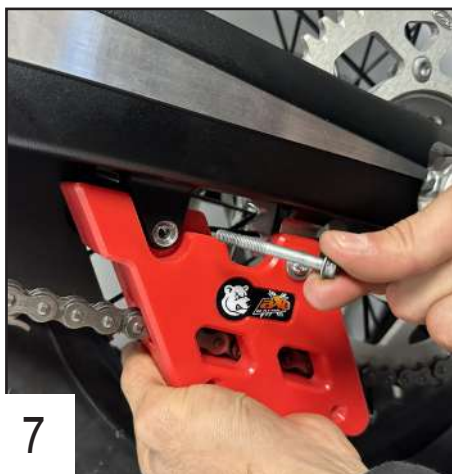

7

Use the OEM screw in the front hole + washer and bolt.


Utilisez la vis d'origine dans le trou avant avec une rondelle et un écrou.

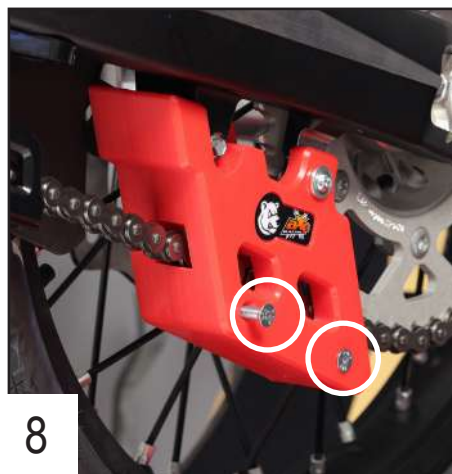

8

Place 2 TFHC 6x55mm screws + washers and bolts in the bottom holes.

Placez 2 vis + rondelles et écrous dans les trous du bas.

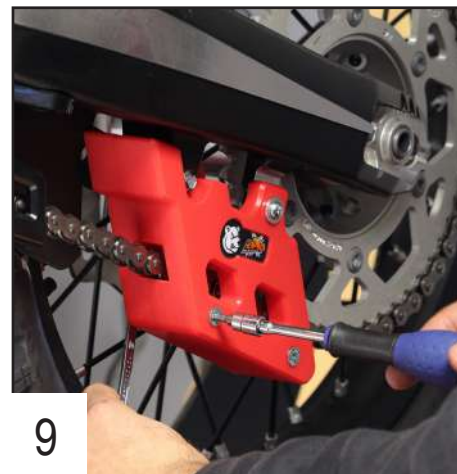

9

Tighten the bottom screws.

Serrez les vis du bas.



10

Tighten the top rear screw.

Serrez la vis prise sur le bras oscillant en premier.



11

Tighten the front screw.

Serrez la vis avant.

**You're
all ready
to ride !**